

PLEASE READ ALL INSTRUCTIONS BEFORE USE FOR PERFECT COTTON CANDY!

KEEP HANDS AND FACE CLEAR OF FLOSS HEAD AND KEEP SPECTATORS AT A REASONABLE DISTANCE!

OPERATING INSTRUCTIONS:

1. Plug in the Machine.
2. Without motor running, fill floss head about 90% with floss sugar. DO NOT overfill! Whenever adding to the floss head, always, fill until 90% full. NEVER add floss sugar when motor is running!
3. After adding floss sugar manually rotate floss head to balance sugar.
4. Flip main switch and heat switch to on position.
5. Turn heat control knob in the clockwise position to maximum setting. This setting will produce fastest possible warm-up.
6. The machine should begin to make floss in a few seconds. When the unit gets up to heat, it will probably start to smoke, just turn the heat control knob in the counter clockwise direction to eliminate the smoking.

CAUTION: never operate machine for prolonged period of time with the heat control knob in a position that causes the floss sugar to smoke. This will result in excessive carbonization of the ribbon (heat element). If you smell burning sugar or see smoke, reduce the heat!

7. Once you find the ideal setting for heat control, you should be able to operate near this position each time you make a new batch.
8. **TO PICK UP FLOSS:** get a cone, place it between two fingers and your thumb, with a light flicking action - break the web of floss that is building up in the pan. Some floss will stick to the cone, lift up the cone with the floss and rotate the cone. DO NOT roll the floss on the cone while in the pan. This will cause you to use more floss to fill the cone, in turn leaving you with less cones of floss per load.
TIP: If you experience difficulty in getting the floss to stick to the cone, pass the cone lightly over a damp sponge.

THIS MACHINE MUST BE RETURNED CLEAN - ANY UNIT NOT CLEANED BEFORE RETURN WILL RESULT IN \$75 CLEANING CHARGE.

MAKE SURE FLOSS HEAD IS COOL BEFORE CLEANING. NEVER SUBMERGE ANY PART OF THIS UNIT IN WATER. IF UNIT IS USED PROPERLY YOU SHOULD ONLY HAVE TO WIPE DOWN.

TIP: If you spin all remaining floss sugar out of floss head cleaning will be minimal.