

# SK600

## Operator's Manual



---

# Overview

## Chapter Contents

Serial Number Location ..... 2

Intended Use ..... 3

Equipment Modification ..... 3

Machine Components ..... 4


Operator Orientation ..... 5

Operating Area ..... 5

About This Manual ..... 6


- Bulleted Lists ..... 6
- Numbered Lists ..... 6

## California Proposition 65

 **WARNING** Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm. [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov).

## Serial Number Location

Record serial number and date of purchase in spaces provided. Serial number is located as shown.

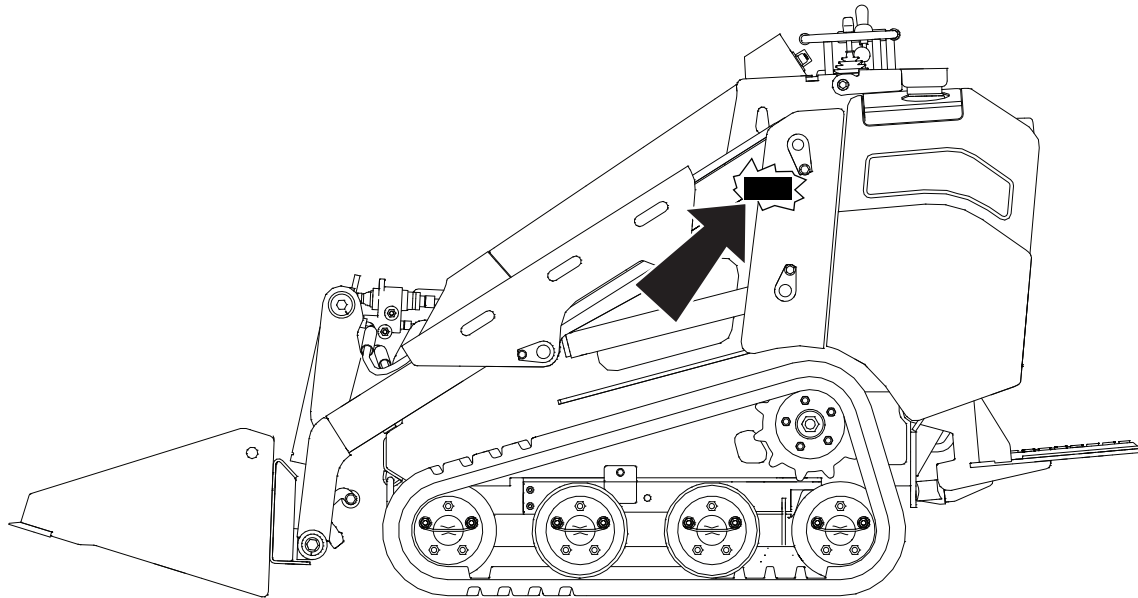

t510m014w.eps

Item	
Date of manufacture	
Date of purchase	
Machine serial number	

## **Intended Use**

The SK600 is a platform, rubber track compact tool carrier unit designed for light-to-medium-duty construction work. The machine has a quick attach plate which makes it easy for an operator to connect different attachments.


This machine is intended for operation only according to the instructions in this manual. Operate machine in ambient temperatures from 10° to 115°F (-12° to 46°C). Contact your Ditch Witch® dealer for provisions required for operating in extreme temperatures. Use in any other way is considered contrary to the intended use.

This machine should be operated, serviced, and repaired only by professionals familiar with its particular characteristics and acquainted with the relevant safety procedures.

## **Equipment Modification**

This equipment was designed and built in accordance with applicable standards and regulations. Modification of equipment could mean that it will no longer meet regulations and may not function properly or in accordance with the operating instructions. Modification of equipment should only be made by competent personnel possessing knowledge of applicable standards, regulations, equipment design functionality/requirements and any required specialized training.

# Machine Components

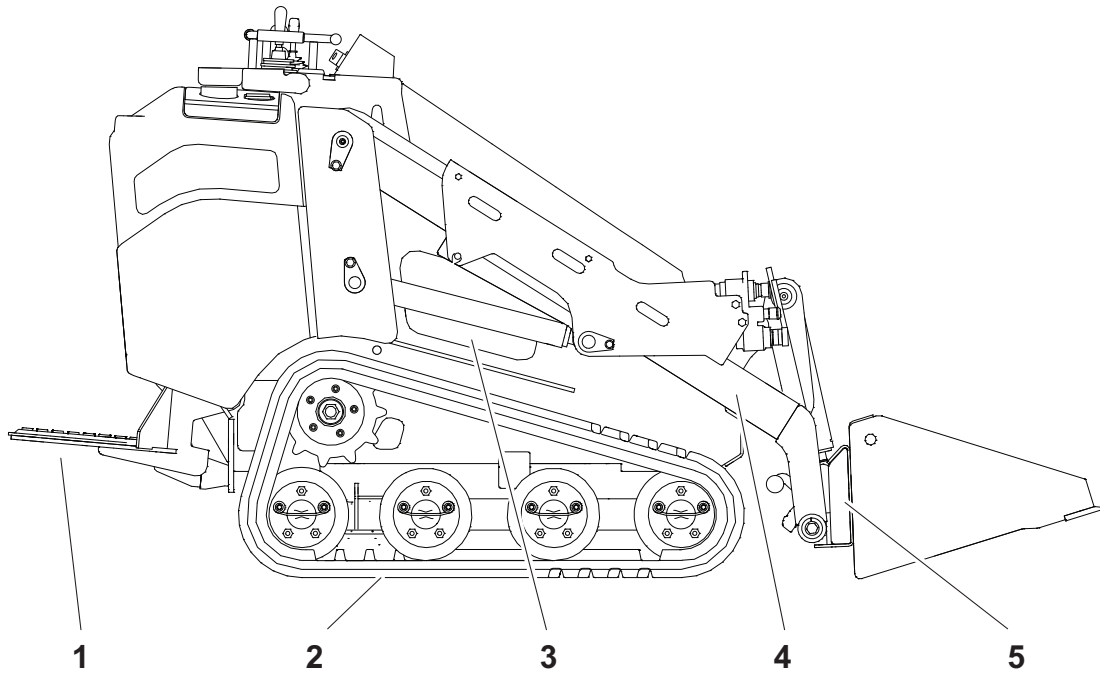


t51om013w.eps

- |                       |                     |
|-----------------------|---------------------|
| 1. Operator station   | 4. Lift arms        |
| 2. Tracks             | 5. Attachment plate |
| 3. Engine compartment |                     |

# Operator Orientation

**IMPORTANT:** Top view of machine is shown.

1. Front
2. Right side
3. Rear
4. Left side

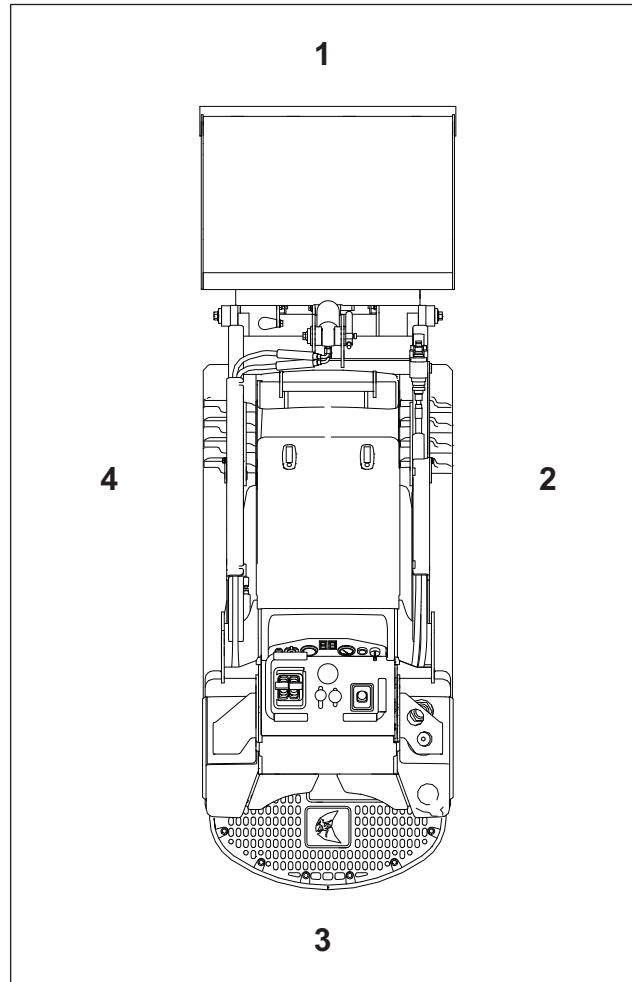


t51om001w.eps

# Operating Area

**IMPORTANT:** Top view of machine is shown.

Operator should stand only in the location shown.

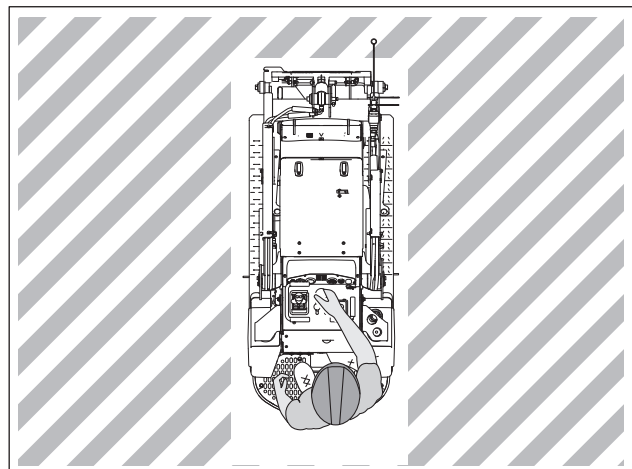

t51om006h.eps

## **About This Manual**

This manual contains information for the proper use of this machine. Cross references such as “See page 50” will direct you to detailed procedures.

### **Bulleted Lists**

Bulleted lists provide helpful or important information or contain procedures that do not have to be performed in a specific order.

### **Numbered Lists**

Numbered lists contain illustration callouts or list steps that must be performed in order.

---

# Foreword

This manual is an important part of your equipment. It provides safety information and operation instructions to help maintain your Ditch Witch® equipment.

Read this manual before using your equipment. Keep it with the equipment at all times for future reference. If you sell your equipment, be sure to give this manual to the new owner.

If you need a replacement copy, contact your Ditch Witch dealer. If you need assistance in locating a dealer, visit our website at [www.ditchwitch.com](http://www.ditchwitch.com) or write to the following address:

The Charles Machine Works, Inc.  
ATTN: Marketing Department  
PO Box 66  
Perry, OK 73077-0066  
USA

The descriptions and specifications in this manual are subject to change without notice. The Charles Machine Works, Inc. reserves the right to improve equipment. Some product improvements may have taken place after this manual was published. For the latest information on Ditch Witch equipment, see your Ditch Witch dealer.

Thank you for buying and using Ditch Witch equipment.



**SK600  
Operator's Manual**

**Issue number 3.0/OM-08/19**

**Part number 053-2962**

**Copyright 2016, 2017, 2019  
by The Charles Machine Works, Inc.**



and Ditch Witch are registered trademarks of The Charles Machine Works, Inc.

This product and its use may be covered by one or more patents at <http://patents.charlesmachine.works>.

---

# Contents

---

## **Overview** **1**

Machine serial number, information about the type of work this machine is designed to perform, basic machine components, and how to use this manual

---

## **Foreword** **7**

Part number, revision level, and publication date of this manual, and factory contact information

---

## **Safety Awareness** **11**

Machine safety alerts and emergency procedures

---

## **Prepare** **19**

Procedures for preparing jobsite, preparing operator, and preparing equipment

---

## **Controls** **31**

Machine controls, gauges, and indicators and how to use them

---

## **Drive** **41**

Procedures for startup, cold start, driving, and shutdown

---

## **Transport** **47**

Procedures for lifting, hauling, and retrieving

---

## **Complete the Job** **55**

Procedures for restoring the jobsite and rinsing and storing equipment

---

## **Service** **57**

Service intervals and instructions for this machine including lubrication, replacement of wear items, and basic maintenance

---

## **Specifications** **78**

Machine specifications including weights, measurements, power ratings, and fluid capacities

**Support**

**83**


The warranty policy for this machine and procedures for obtaining warranty consideration and training

---

---


# Safety Awareness

## Chapter Contents


	For additional precautions, see "Prepare" chapter.
-----------------------------------------------------------------------------------	----------------------------------------------------

- Guidelines . . . . . 12**
- Emergency Procedures . . . . . 13**
  - Electric Strike Description . . . . . 13
  - If an Electric Line is Damaged . . . . . 14
  - If a Gas Line is Damaged . . . . . 14
  - If a Fiber Optic Cable is Damaged . . . . . 15
  - If Machine Catches on Fire . . . . . 15
- Safety Alert Classification . . . . . 17**
- Machine Safety Alerts . . . . . 18**

## Guidelines

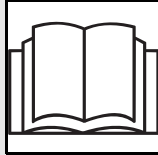**⚠ WARNING**

Misuse of machine can cause death or serious injury. Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.

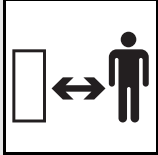**⚠ WARNING**



Raised component. Crushing can cause death or serious injury. Stay away. Use correct equipment and procedures.

Follow these guidelines before operating any jobsite equipment:

- Complete proper training.
- Read and understand operator's manual before using equipment.
- Wear personal protective equipment. See "Prepare Operator" in "Prepare" chapter.
- Mark proposed path with white paint and have underground utilities located before working. In the US or Canada, call 811 (US) or 888-258-0808 (US and Canada). Also contact any local utilities that do not participate in the One-Call service. In countries that do not have a One-Call service, contact all local utility companies to have underground utilities located.
- Classify jobsite based on its hazards and use correct tools and machinery, safety equipment, and work methods for jobsite.
- Mark jobsite clearly and keep spectators away.
- Review jobsite hazards, safety and emergency procedures, and individual responsibilities with all personnel before work begins. Safety videos are available from your Ditch Witch® dealer or at [www.ditchwitch.com/safe](http://www.ditchwitch.com/safe). Safety Data Sheets (SDS) are available at [www.ditchwitch.com/support](http://www.ditchwitch.com/support).
- Fully inspect equipment before operating. Repair or replace any worn or damaged parts. Replace missing or damaged safety shields and safety alert signs. Contact your Ditch Witch dealer for assistance.
- Follow instructions on all safety alert signs on machine.
- Use equipment carefully per the instructions in this manual. Stop operation and investigate anything that does not look or feel right.
- Do not operate machine where flammable gas may be present.
- Only operate equipment in well ventilated areas.
- Always tie down equipment and properly stow accessories, even if traveling short distances.
- Contact your Ditch Witch dealer if you have any questions about operation, maintenance, or equipment use.

- Complete the equipment checklist located at [www.ditchwitch.com/safe](http://www.ditchwitch.com/safe).

## Emergency Procedures

		<b>⚠ WARNING</b> Underground utilities. Contact can cause death or serious injury. Locate and verify underground utilities before digging or drilling.
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------

Before operating any equipment, review emergency procedures and check that all safety precautions have been taken.

**EMERGENCY SHUTDOWN:** Shut off machine or press remote engine stop button (if equipped).

## Electric Strike Description

When working near electric cables, remember the following:

- Electricity follows all paths to ground, not just path of least resistance.
- Pipes, hoses, and cables will conduct electricity back to all equipment.
- Low voltage current can injure or kill. Many work-related electrocutions result from contact with less than 440 volts.

Most electric strikes are not noticeable, but indications of a strike include:

- power outage
- smoke
- explosion
- popping noises
- arcing electricity

**If any of these occur, assume an electric strike has occurred.**

## **If an Electric Line is Damaged**

If you suspect an electric line has been damaged, DO NOT MOVE. Take the following actions. The order and degree of action will depend on the situation.

- If you are **on the machine**, REMAIN ON MACHINE. Raise attachments and drive from immediate area.
- If you are **off the machine**,
  - DO NOT TOUCH ANY EQUIPMENT.
  - If you must leave the area, take small steps with feet close together to reduce the hazard of being shocked from one foot to the other.
- Warn people nearby that an electric strike has occurred. Instruct them to leave the area.
- Have someone contact electric company to shut off power.
- If you leave the area, do not return to jobsite or allow anyone into area until given permission by utility company.

## **If a Gas Line is Damaged**

If you suspect a gas line has been damaged, take the following actions. The order and degree of action will depend on the situation.

- Immediately shut off engine(s), if this can be done safely and quickly.
- Remove any ignition source(s), if this can be done safely and quickly.
- Warn others that a gas line has been cut and that they should leave the area.
- After warning others to leave the area, leave jobsite as quickly as possible.
- Immediately call your local emergency phone number and utility company.
- If jobsite is along street, stop traffic from driving near jobsite.
- Do not return to jobsite until given permission by emergency personnel and utility company.

## **If a Fiber Optic Cable is Damaged**

Do not look into cut ends of fiber optic or unidentified cable. Vision damage can occur. Contact utility company.

## **If Machine Catches on Fire**

Perform emergency shutdown procedure and then take the following actions. The order and degree of action will depend on the situation.

- Immediately move battery disconnect switch (if equipped and accessible) to disconnect position.
- If fire is small and fire extinguisher is available, attempt to extinguish fire.
- If fire cannot be extinguished, leave area as quickly as possible and contact emergency personnel.

## Safety Alert Classifications

These classifications and the icons defined on the following pages work together to alert you to situations which could be harmful to you, jobsite bystanders, or your equipment. When you see these words and icons in the book or on the machine, carefully read and follow all instructions. YOUR SAFETY IS AT STAKE.



When you see this safety alert sign, carefully read and follow all instructions. **YOUR SAFETY IS AT STAKE.** Read this entire section before using your equipment.

Watch for the three safety alert levels: **DANGER**, **WARNING**, and **CAUTION**. Learn what each level means.



**DANGER** indicates a hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.



**WARNING** indicates a hazardous situation that, if not avoided, could result in death or serious injury.




**CAUTION** indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

Watch for two other words: **NOTICE** and **IMPORTANT**.

**NOTICE** indicates information considered important, but not hazard-related (e.g., messages relating to property damage).

**IMPORTANT** can help you do a better job or make your job easier in some way.

# Machine Safety Alerts

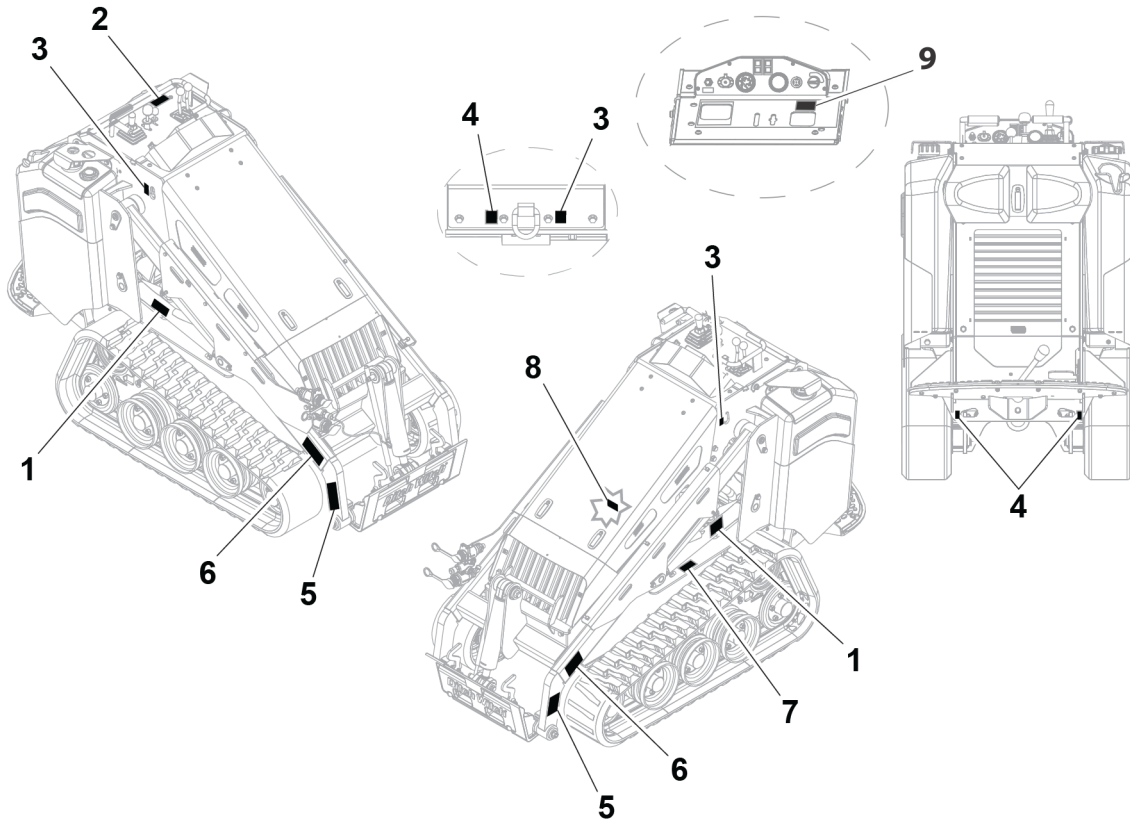

Decal\_SK600'.png

1



**⚠ WARNING** Raised component. Crushing can cause death or serious injury. Stay away or secure raised component with locking device. Use correct equipment and procedures.

2



**⚠ WARNING** Misuse of machine can cause death or serious injury. Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.

3




Lift point. See Transport chapter for more information.

4




Tiedown location. See Transport chapter for more information.

5

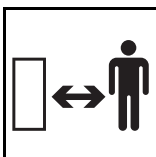


**! WARNING** Moving parts. Contact can cause serious injury. Stay away.

6

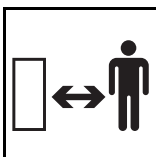


**! WARNING** Lifted load. Crushing can cause death or serious injury. Stay away from lifted load and its range of movement.

7

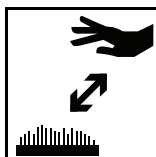

**! CAUTION** Hot parts. Contact can cause burns. Only touch when cool or wear gloves.

8

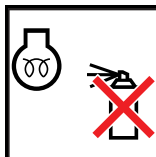

**! WARNING** Pre-heater. Fire or explosion can cause death or serious injury. Never use starter fluid.

9



**! WARNING** Underground utilities. Contact can cause death or serious injury. Locate and verify underground utilities before digging or drilling.

# Prepare

## Chapter Contents

	For additional precautions, see "Safety Awareness" chapter.
-----------------------------------------------------------------------------------	-------------------------------------------------------------

### **Prepare Jobsite . . . . . 20**

- Review Job Plan . . . . . 20
- Select Start and End Points . . . . . 20
- Identify Hazards . . . . . 21
- Locate Utilities . . . . . 22
- Classify Jobsite . . . . . 23
- Arrange for Traffic Control . . . . . 24

### **Prepare Operator . . . . . 25**

### **Prepare Equipment . . . . . 26**

- Check Supplies . . . . . 26
- Check Equipment . . . . . 26
- Assemble Accessories . . . . . 27
- Connect Attachment . . . . . 27

## Prepare Jobsite



**WARNING**

Underground utilities. Contact can cause death or serious injury. Locate and verify underground utilities before digging or drilling.

**To help avoid injury:**

- Expose lines by careful hand digging or soft excavation before operating equipment. Use appropriate equipment and procedures for exposing utility lines.
- Classify jobsite and follow precautions based on classification.
- Follow local regulations for digging near utilities.

A successful job begins before working. The first step in planning is reviewing information already available about the job and jobsite.

### Review Job Plan

Review blueprints or other plans. Check for information about existing or planned structures, elevations, or proposed work that may be taking place at the same time.

### Select Start and End Points

Select one end to use as a starting point. Consider the following when selecting a starting point:

#### Slope

Equipment should be parked on a level site. Consider how slope will affect setup and operation. Assess the risks on each slope to determine if factors affecting risks create an unsafe condition for working. See “Slope Guidelines” on page 44.

#### Space

Check that starting and ending points allow enough space for working.

#### Comfort

Consider shade, wind, fumes, and other site features.

## Identify Hazards

Inspect jobsite before transporting equipment. Check for the following:

- overall grade or slope
- changes in elevation such as hills or open trenches
- obstacles such as buildings, railroad crossings, or streams
- signs of utilities
  - “buried utility” notices
  - gas or water meters
  - drop boxes
  - manhole covers
  - utility facilities without overhead lines
  - junction boxes
  - light poles
  - sunken ground
- traffic
- access
- soil type and condition
- loose material such as fencing or cable

Identify safety hazards and classify jobsite if attachment will penetrate ground. See “Classify Jobsite” on page 23.

## Locate Utilities

### Notify One-Call Services


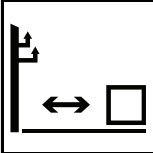
Mark proposed path with white paint and have underground utilities located before working.

- In the US or Canada, call 811 (US) or 888-258-0808 (US and Canada). Also contact any local utilities that do not participate in the One-Call service.
- In countries that do not have a One-Call service, contact all local utility companies to have underground utilities located.

### Verify Underground Utilities

Have an experienced locating equipment operator sweep area within 20' (6 m) to each side of proposed excavation to verify previously marked line and cable locations. Mark location of all buried utilities and obstructions.

### Locate Overhead Lines

		<b>⚠ DANGER</b> Overhead electrical lines. Contact will cause death or serious injury. Know location of lines. Stay away.
------------------------------------------------------------------------------------	------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------

Note location and height of all overhead lines in jobsite and ensure that equipment maintains proper distance from live lines.

## Classify Jobsite



### Select a Classification

Jobsites are classified according to underground hazards present, not by line being installed. Jobsite may have more than one classification.

If working . . .	then classify jobsite as . . .
within 10' (3m) of a buried electric line	electric
within 10' (3m) of a natural gas line	natural gas
in concrete, sand, or granite which is capable of producing crystalline silica dust	crystalline silica dust
within 10' (3m) of any other hazard	other

Classify jobsite as electric if jobsite is in question or if the possibility of unmarked electric utilities exists.

### Apply Precautions

**⚠ WARNING** Underground utilities. Contact can cause death or serious injury. Locate and verify underground utilities before digging or drilling.

Once classified, precautions appropriate for jobsite must be taken. Follow US Department of Labor regulations on excavating and trenching (Part 1926, Subpart P) and other similar regulations.

#### Electric Jobsite Precautions

Use one or both of these methods:

- Expose line by careful hand digging or soft excavation.
- Have service shut down while work is in progress. Have electric company test lines before returning them to service.

**Natural Gas Jobsite Precautions**

Position equipment upwind from gas lines and use one or both of these methods:

- Expose line by careful hand digging or soft excavation.
- Have service shut down while work is in progress. Have gas company test lines before returning them to service.

**Crystalline Dust Jobsite Precautions**

		<b>CAUTION</b> Silica dust. Exposure can cause lung disease or cancer. Use breathing protection.
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------

Crystalline silica dust is a naturally occurring substance found in soil, sand, concrete, granite, and quartz.

To reduce exposure when cutting, drilling, or working these materials:

- Use water spray or other means to control dust.
- Refer to US Occupational Safety and Health Administration (OSHA) guidelines or other applicable regulating guidelines for appropriate breathing protection or dust control methods.

**Other Jobsite Precautions**

You may need to use different methods to safely avoid other underground hazards. Talk with those knowledgeable about hazards present at each site to determine which precautions should be taken or if job should be attempted.

Clear objects such as landscaping fabric, cable, and wire from the work area. These objects may be underground or partially buried.

**Arrange for Traffic Control**

Vehicle and pedestrian traffic must be a safe distance from equipment. Evaluate jobsite and allow an appropriate buffer zone around equipment. If working near a road or other traffic area, contact local authorities about safety procedures and regulations.

## Prepare Operator



**⚠ WARNING** Jobsite hazards. Exposure can cause death or serious injury. Use correct equipment and work methods. Use and maintain appropriate safety equipment.

### To help avoid injury:

- Wear personal protective equipment including hard hat, safety eye wear, foot protection, hearing protection, and gloves (except when near rotating equipment).
- Remove jewelry.
- Wear close-fitting, high visibility clothing.
- Have other personal protective equipment, such as insulated boots and gloves, breathing protection, and face shield, etc. available for use depending on jobsite hazards or requirements.

Follow these guidelines before operating any jobsite equipment:

- Complete proper training and read operator's manual before using equipment.
- Plan for emergency services. Have the telephone numbers for local emergency and medical facilities on hand. Check that you will have access to a telephone.
- Review jobsite hazards, safety and emergency procedures, and individual responsibilities with all personnel before work begins. Safety videos are available from your Ditch Witch® dealer or at [www.ditchwitch.com/safe](http://www.ditchwitch.com/safe). Safety Data Sheets (SDS) are available at [www.ditchwitch.com/support](http://www.ditchwitch.com/support).
- Use equipment carefully. Stop operation and investigate anything that does not look or feel right.

## Prepare Equipment

### Check Supplies

- fuel
- keys
- marking flags or paint
- notepad and pencil
- spare fuses
- lubricants


### Check Equipment

#### Fluid Levels

- fuel
- engine oil
- diesel exhaust fluid (DEF), if needed
- hydraulic fluid
- engine coolant

#### Condition and Function

- all controls

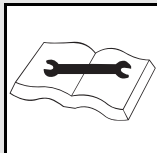

**⚠ WARNING** Improper control function. Use can cause death or serious injury. If control does not work as described in instructions, stop machine and have it serviced.

- battery
- hoses and valves
- pumps and motors
- tires or tracks
- signs, guards, and shields
- filters (air, oil, hydraulic)
- belts

## Assemble Accessories

If required, mount fire extinguisher near the power unit but away from possible points of ignition. The fire extinguisher should always be classified for both oil and electric fires. It should meet legal and regulatory requirements.

## Connect Attachment


**NOTICE:** Use only Ditch Witch®-approved attachments. Attachments can change the stability and operating characteristics of the machine. See attachment operation manual for instructions regarding proper operation of attachments.

**IMPORTANT:** For information on disconnecting an attachment, see page 56.

### Attachment

**IMPORTANT:** Before connecting attachment to machine, ensure that attachment (1) and receiver (2) plates are free of dirt and debris.


1. Ensure latch handles are down.
2. Position attachment on level surface with enough space behind it to accommodate machine.
3. Start engine.

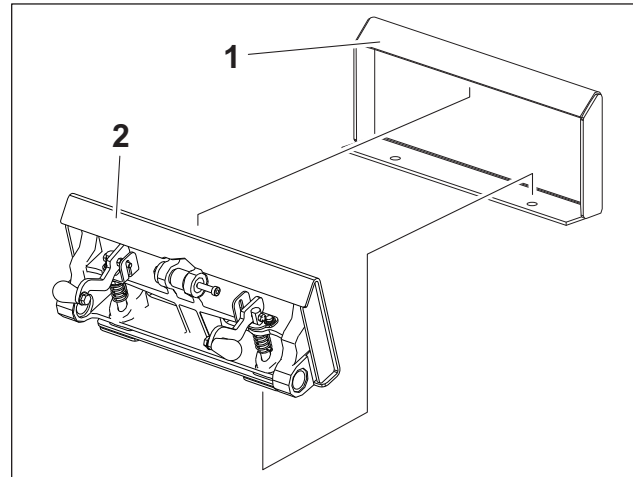

t51om031w.eps


**Prepare Equipment**

4. Tilt attachment plate (1) forward.
5. Position attachment plate in the upper lip of the receiver plate (2) on attachment.
6. Raise lift arms while tilting back attachment plate to engage pins.

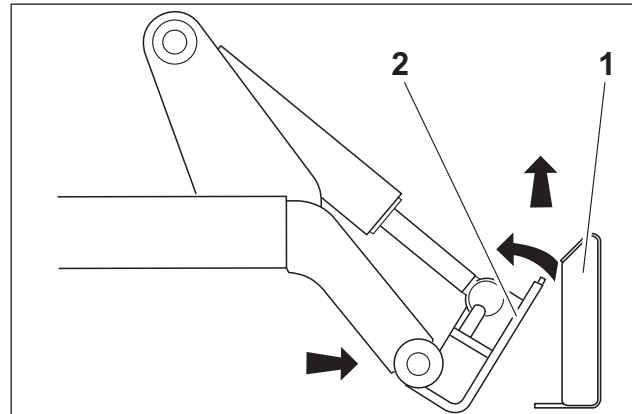

t05om026c.eps

7. Ensure pins are engaged by rotating attachment down.

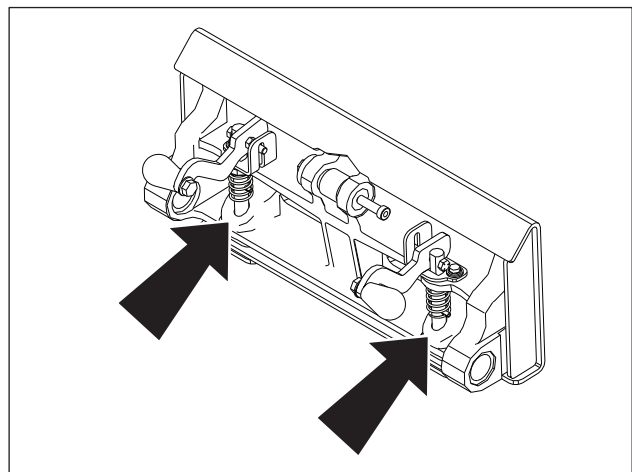

t51om018w.eps

## Hydraulic Hoses

If attachment requires hydraulic power for operation, connect hydraulic hoses.



**⚠ WARNING** Pressurized fluid or air. Injection can cause death or serious injury. Refer to operator's manual for correct use.


### To help avoid injury:

- Use a piece of cardboard or wood, rather than hands, to check for leaks.
- Before disconnecting a hydraulic line, turn engine off and operate all controls to relieve pressure.
- Lower, block, or support any raised component with a hoist.
- Cover connection with heavy cloth and loosen connector nut slightly to relieve residual pressure. Catch all fluid in a container.
- Before using system, check that all connections are tight and all lines are undamaged.
- If you are injured, seek immediate medical attention from a doctor familiar with this type of injury.



**⚠ CAUTION** Hot parts. Contact can cause burns. Only touch when cool or wear gloves.

1. Cycle attachment drive control to relieve residual pressure at hydraulic couplers.
2. Remove dirt and debris from hydraulic couplers.
3. Connect male coupler on attachment to female coupler (3) on machine.
4. Connect female coupler on attachment to male coupler (1) on machine.
5. If needed, connect attachment case drain hose to case drain connector (2).
6. Ensure hose connections are secure by pulling on hoses.

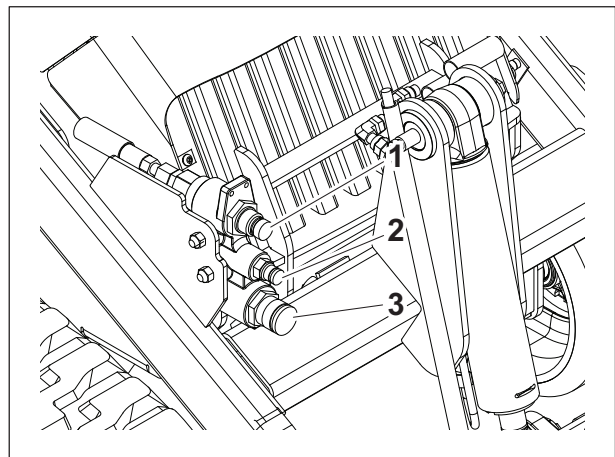

t35om011w.eps




---

# Controls

## Chapter Contents

<b>Attachment Plate</b> .....	<b>32</b>
<b>Battery Disconnect</b> .....	<b>33</b>
<b>Engine Compartment</b> .....	<b>34</b>
<b>Gauges and Indicators</b> .....	<b>35</b>
<b>Operator Station</b> .....	<b>38</b>

## Attachment Plate

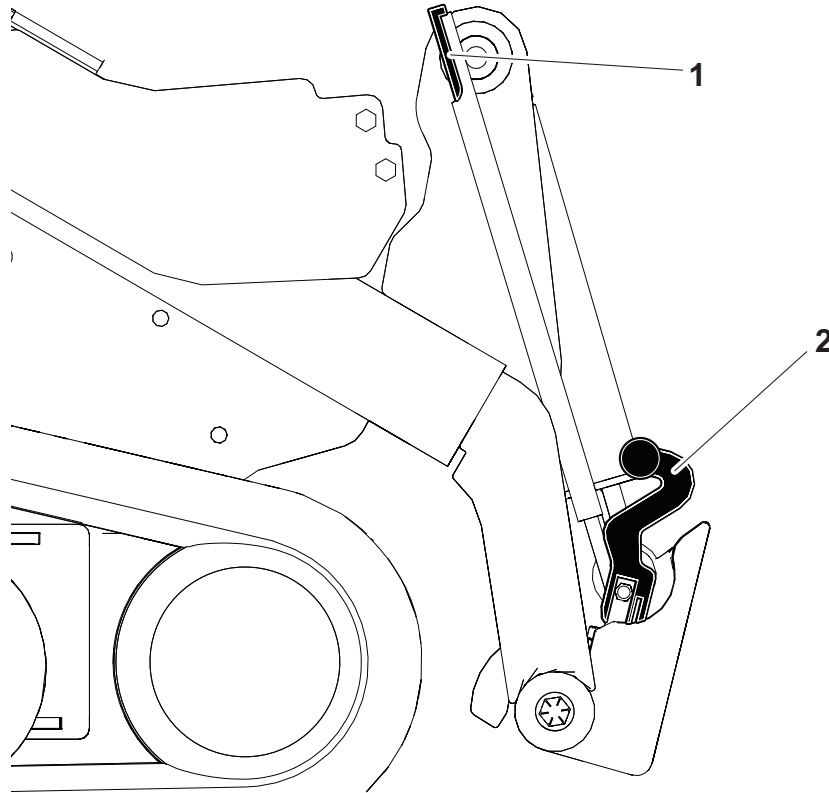


t51om034w.eps

1. Level indicator


2. Attachment latches

Item	Description	IMPORTANT
<b>1. Level indicator</b>	To level bucket, adjust bucket position until indicator is at top of sleeve.	To level other attachments, adjust attachment position until it is level. Mark indicator position on sleeve. Use mark to indicate when attachment is level.
<b>2. Attachment latches</b>	To lock attachment, ensure latch is down after attachment is connected.  To unlock, move latch up.	See "Connect Attachment" on page 27.


# Battery Disconnect

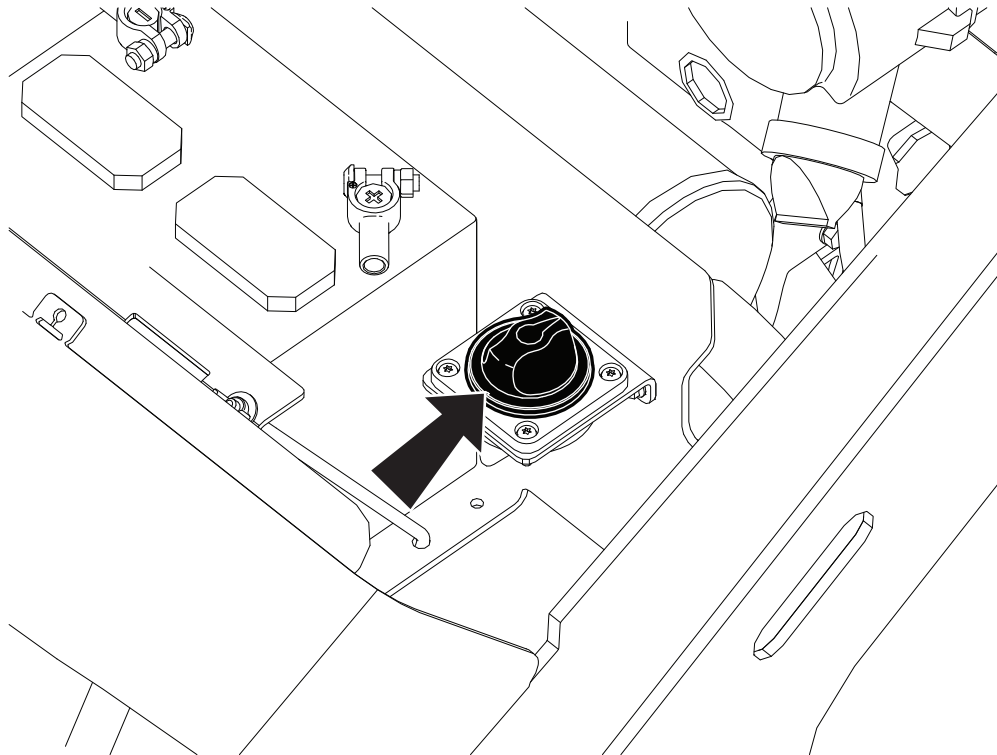


t51om002w.eps

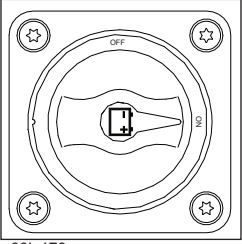Item	Description	IMPORTANT
<p><b>Battery disconnect switch</b></p>  <p>c00ic179w.eps</p>	<p>To disconnect, move left.</p> <p>To connect, move right.</p>	<p><b>NOTICE:</b></p> <ul style="list-style-type: none"> <li>• Do not disconnect with engine running.</li> <li>• To avoid equipment damage, wait two minutes after turning engine off before disconnecting battery.</li> </ul>


## Engine Compartment

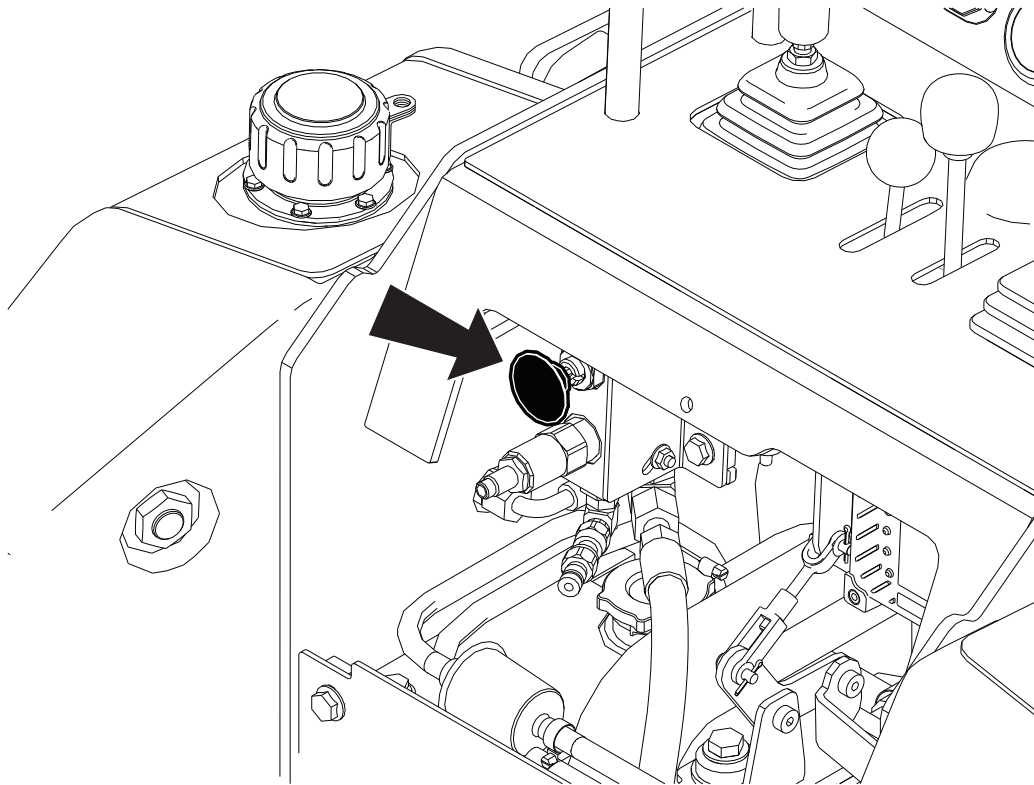

t51om039w.eps

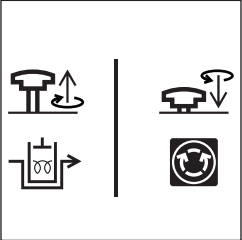
Item	Description	IMPORTANT
<p data-bbox="203 1192 472 1220"><b>Hydraulic fluid bypass</b></p>  <p data-bbox="253 1470 362 1486">c00ic180w.eps</p>	<p data-bbox="586 1192 935 1287">To open, pull and rotate knob until it seats in the open position.</p> <p data-bbox="586 1331 919 1392">To close, rotate knob until it seats in the closed position.</p>	<ul data-bbox="971 1192 1386 1461" style="list-style-type: none"><li data-bbox="971 1192 1386 1253">• Use bypass to assist starting a cold engine.</li><li data-bbox="971 1276 1386 1337">• Attachment will not operate at full flow when valve is open.</li><li data-bbox="971 1360 1386 1461">• Auxiliary hydraulics can be operated at low flow using bypass.</li></ul>


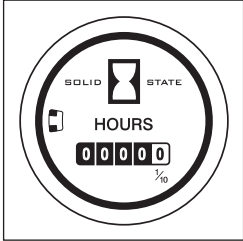
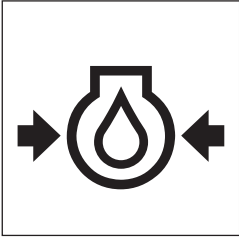
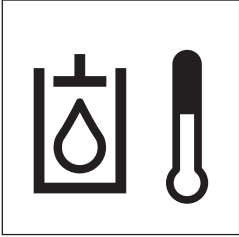
# Gauges and Indicators




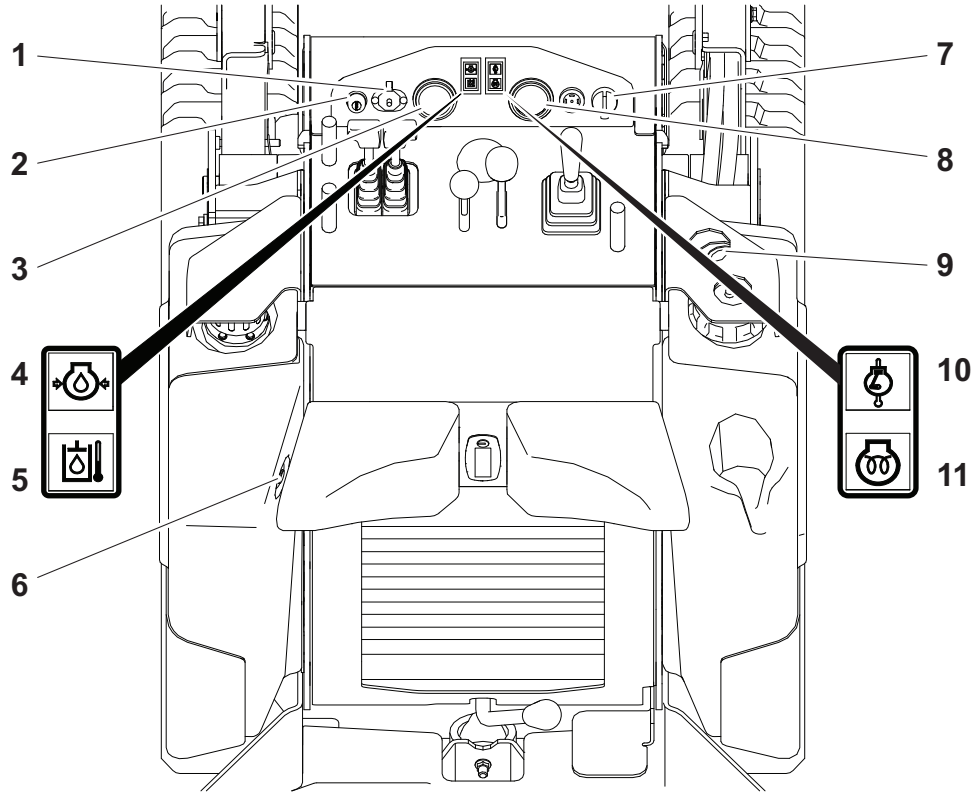


t51om038w.eps


- |                                          |                                          |
|------------------------------------------|------------------------------------------|
| 1. Auxiliary outlet                      | 7. Ignition switch                       |
| 2. Glow plug button                      | 8. Engine coolant temperature gauge      |
| 3. Hourmeter                             | 9. Fuel gauge                            |
| 4. Engine oil pressure indicator         | 10. Engine coolant temperature indicator |
| 5. Hydraulic fluid temperature indicator | 11. Glow plug indicator                  |
| 6. Hydraulic fluid level sight glass     |                                          |

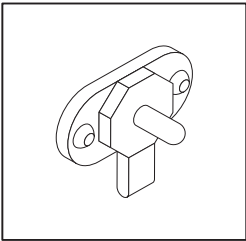Item	Description	IMPORTANT
<b>1. Auxiliary outlet</b>  <small>c00ic114a.eps</small>	Provides power for other equipment.	Power output is 12VDC, 5A.

Item	Description	IMPORTANT
<p><b>2. Glow plug button</b></p>  <p><small>c00ic108h.eps</small></p>	<p>To turn on, press and hold.</p>	<p>To help start cold engine, press glow plug button according to ambient temperatures below.</p> <ul style="list-style-type: none"> <li>• If below 40°F (4°C), press and hold for 5 seconds.</li> <li>• If below 20°F (-7°C), press and hold for 10 seconds.</li> <li>• Do not press and hold for more than 20 seconds continuously.</li> </ul>
<p><b>3. Hourmeter</b></p>  <p><small>c00ic019h.eps</small></p>	<p>Displays engine operating time.</p>	<p>Use these times to schedule service.</p>
<p><b>4. Engine oil pressure indicator</b></p>  <p><small>c00ic119h.eps</small></p>	<p>Lights when engine oil pressure is low.</p>	<p>Lights briefly when engine is started.</p>
<p><b>5. Hydraulic fluid temperature indicator</b></p>  <p><small>c00ic023h.eps</small></p>	<p>Lights when hydraulic fluid temperature is too high.</p>	<p>When indicator lights, alarm will sound.</p>
<p><b>6. Hydraulic fluid level sight glass</b></p>	<p>Shows level of hydraulic fluid.</p>	

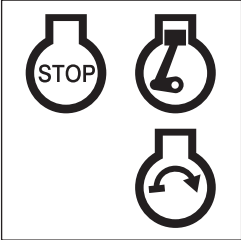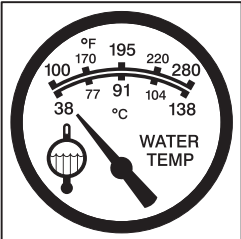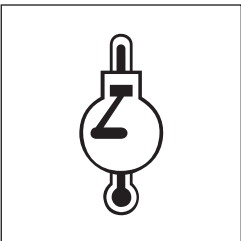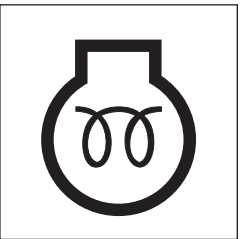

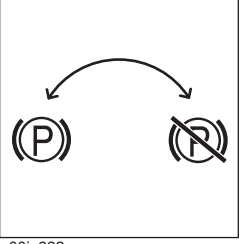
Item	Description	IMPORTANT
<p><b>7. Ignition switch</b></p>  <p>c00ic065h.eps</p>	<p>To activate accessories, turn right.</p> <p>To start engine on, turn right and hold.</p> <p>To shut off machine, turn left.</p>	
<p><b>8. Engine coolant temperature gauge</b></p>  <p>c00ic086a.eps</p>	<p>Displays coolant temperature.</p>	
<p><b>9. Fuel gauge</b></p>	<p>Shows level of fuel.</p>	<p>See "Approved Fuel" on page 62.</p>
<p><b>10. Engine coolant temperature indicator</b></p>  <p>c00ic274h.eps</p>	<p>Lights when engine coolant temperature is too high.</p>	<p>When indicator lights, alarm will sound.</p>
<p><b>11. Glow plug indicator</b></p>  <p>c00ic180h.eps</p>	<p>Lights when ignition switch is on and glow plug button is pressed.</p>	



## Operator Station

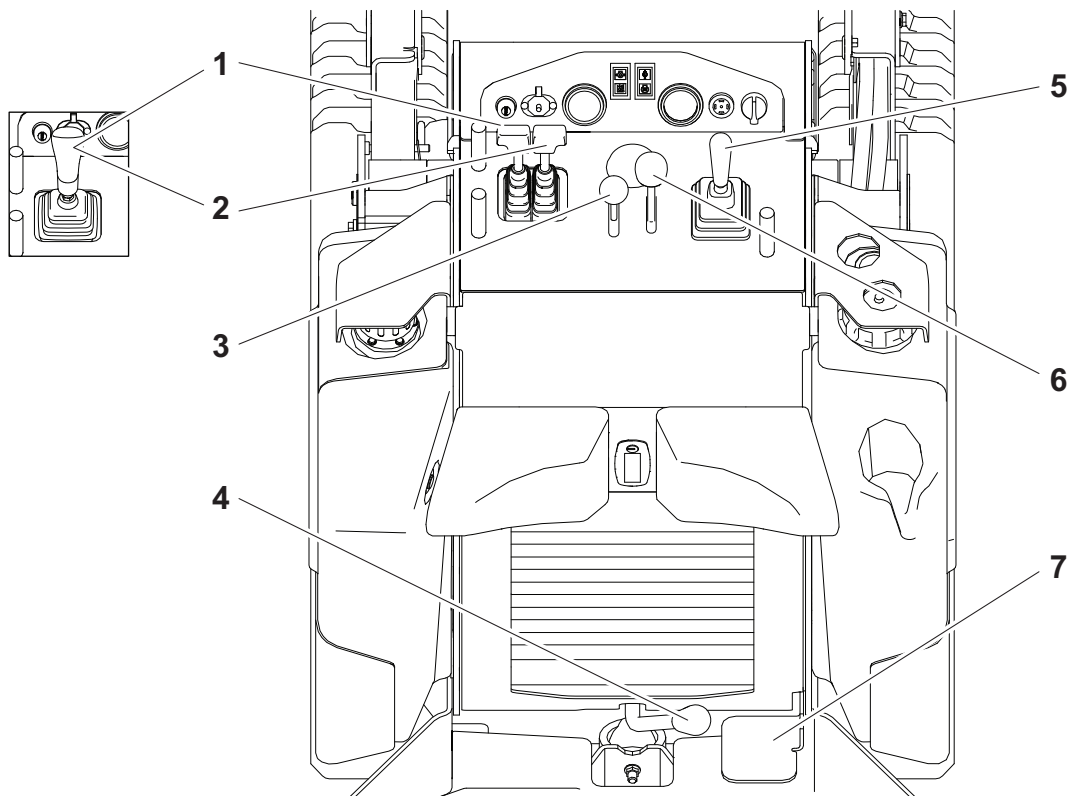

t51om037w.eps

- |                                                    |                                  |
|----------------------------------------------------|----------------------------------|
| 1. Left track drive control/track drive joystick*  | 4. Parking brake                 |
| 2. Right track drive control/track drive joystick* | 5. Lift arm control              |
| 3. Throttle                                        | 6. Attachment drive control      |
| * If equipped                                      | 7. Attachment drive foot control |

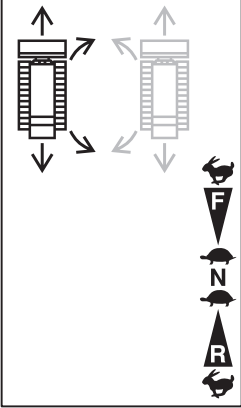Item	Description	IMPORTANT
<p>1. <b>Left track drive control</b></p> <p>2. <b>Right track drive control</b></p>  <p>c00ic087a.eps</p>	<p>To drive forward, push both controls forward.</p> <p>To drive in reverse, pull back.</p> <p>To go faster in either direction, move control farther from neutral position.</p> <p>To steer, move left or right.</p>	<p>See "Steer" on page 43.</p>
<p><b>Track drive joystick (if equipped)</b></p>	<p>To drive forward, push.</p> <p>To drive in reverse, pull.</p> <p>To go faster in any direction, move farther from neutral position.</p> <p>To steer, move left or right.</p>	<p>See "Steer" on page 43.</p>
<p>3. <b>Throttle</b></p>  <p>c00ic007c.eps</p>	<p>To increase engine speed, push.</p> <p>To decrease, pull.</p>	<p>Increasing engine speed also increases attachment speed.</p>
<p>4. <b>Parking brake</b></p>  <p>c00ic662w.eps</p>	<p>To set, move left.</p> <p>To release, move right.</p>	<p>Do not set parking brake when machine is moving.</p>

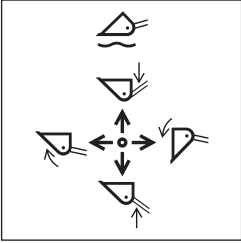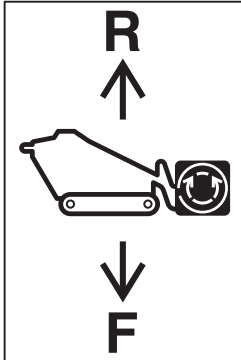Item	Description	IMPORTANT
<p><b>5. Lift arm control</b></p>  <p><small>c00ic284h.eps</small></p>	<p>To move lift arms down, push.</p> <p>To float, push to end.</p> <p>To move lift arms up, pull.</p> <p>To curl attachment up, move left.</p> <p>To curl attachment down, move right.</p>	
<p><b>6. Attachment drive control</b></p>  <p><small>c00ic090a.eps</small></p>	<p>To engage attachment drive in reverse, push.</p> <p>To engage in forward, pull.</p>	<p>Use attachment drive foot control to hold in engaged position when hands are busy operating other controls.</p> <p>See "Hydraulic fluid bypass" on page 34 for instructions on operating attachment drive control at low flow.</p>
<p><b>7. Attachment drive foot control</b></p>	<p>To hold attachment drive control in forward or reverse, lift lever lock, move lever in desired direction, and press pedal.</p>	<p>Use when hands are needed to operate other controls.</p>

# Drive

## Chapter Contents


 For additional precautions, see "Safety Awareness" and "Prepare" chapters.

**IMPORTANT:** For more information on how to operate controls, see "Controls" chapter.

- Start . . . . . 42**
- Steer . . . . . 43**
  - Single Joystick Ground Drive . . . . . 43
  - Dual Lever Ground Drive . . . . . 43
- Operate . . . . . 43**
  - Slope Guidelines . . . . . 44
  - Reduce Track Wear . . . . . 45
- Shut Down . . . . . 45**

# Start

**EMERGENCY SHUTDOWN:** Shut off machine or press remote engine stop button (if equipped).

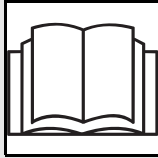

**⚠ WARNING** Misuse of machine can cause death or serious injury. Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.

**To help avoid injury:**

- Allow hydraulic fluid time to warm before operating in cold weather. Cold hydraulic fluid can lengthen ground drive stopping time.
- For starting in extreme temperatures, contact your Ditch Witch® dealer.



**⚠ WARNING** Pre-heater. Fire or explosion can cause death or serious injury. Never use starter fluid.

**NOTICE:** If engine turns but does not start within 10 seconds, allow starter to cool. Wait at least 30 seconds and try again.

1. Ensure all controls are in neutral.
2. Set parking brake.
3. Insert key and activate accessories using ignition switch.
4. **If starting machine in normal conditions,** start engine and run at low throttle under light load for at least one minute before applying heavier load.

**If starting machine in cold weather:**

1. Press and hold glow plug button.
2. Start engine.
3. Warm engine and hydraulic fluid by gradually increasing engine speed for up to 30 minutes.
4. After warmup, carefully operate all hydraulic controls at low throttle until controls operate as described in controls chapter.

# Steer

## Single Joystick Ground Drive

To steer while moving forward, push joystick and then move left or right. Machine will gradually turn.

To steer while moving in reverse, pull joystick and then move left or right. Machine will gradually turn.

For tight steering at low speed, return joystick to neutral position and then to a corner. Tracks will counter-rotate and machine will turn in a tight circle.

## Dual Control Ground Drive

To steer while moving forward, move one control slightly more than the other to turn in desired direction. Machine will gradually turn.

To steer while moving in reverse, move one control slightly more than the other to turn in desired direction. Machine will gradually turn.

For tight steering at low speed, pull one control and push the other to turn in desired direction. Tracks will counter-rotate and machine will turn in a tight circle.

# Operate


**NOTICE:**

- Drive carefully in congested areas. Know machine's clearance and turning radius.
- Survey field of vision when operating machine.

**EMERGENCY EXIT:** Release controls and step off platform.


1. Release parking brake.
2. Raise attachment off ground.
3. Drive machine.
4. Adjust throttle as needed.
5. See attachment operation manual for instructions regarding proper operation of attachments.

## Slope Guidelines

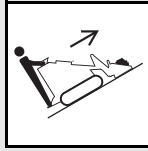

**⚠ WARNING** Tipover. Crushing can cause death or serious injury. Follow procedure in operator's manual. Drive cautiously.

### To help avoid injury:

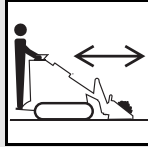

- Operate at slow speed when on rough terrain.
- Avoid driving across slopes.
- Never jerk control levers. Use a steady, even motion.
- Always operate with heavy end uphill.
- Always drive with attachment low to the ground.
- See page 78 for operating capacity.

Operating safely on a slope depends upon many factors including:

- distribution of machine weight, including front loading and absence of load
- height of load
- even or rough ground conditions
- potential for ground giving way causing unplanned tilt forward, reverse or sideways
- nearness of ditches, ruts, stumps or other obstructions and sudden changes in slope
- speed
- turning
- braking performance
- operator skill

These varying factors make it impractical to specify a maximum safe operating angle in this manual. It is therefore important for the operator to be aware of these conditions and adjust operation accordingly. Maximum engine angle and braking performance are two absolute limits which must never be exceeded. These maximums are stated below since they are design limits. **These design limits usually exceed the operating limits and must never be used alone to establish safe operating angle for variable conditions.**

Maximum engine lubrication angle: 20°

Maximum service brake retarding force: equal to traction of both tracks

Maximum parking brake holding force: equal to traction of one track

## Reduce Track Wear

Rubber tracks are best suited at soil-based jobsites with minimal rocks and debris. To reduce track wear drive slowly and make wide turns. Avoid the following:

- spinning tracks under heavy load
- turning on sharp objects such as stones, broken concrete, or debris
- quick turns on asphalt or concrete
- driving over curbs or ledges
- driving with track edges pressed against hard walls or curbs
- operating on corrosive materials such as salt or fertilizer

## Shut Down

1. When job is complete, move machine to level ground.
2. Stop machine movement.
3. Set parking brake.
4. Lower lift arms to ground.
5. Return all controls to neutral.
6. Run engine at low throttle with no load for at least five minutes to cool.
7. Shut off machine.
8. If leaving machine unattended, remove key.
9. For maintenance or long-term storage, disconnect battery using battery disconnect switch.

**NOTICE:** Wait two minutes after shutting off machine before disconnecting battery.



---

# Transport

## Chapter Contents



For additional precautions, see "Safety Awareness" and "Prepare" chapters.

**IMPORTANT:** For more information on how to operate controls, see "Controls" chapter.

**Lift** ..... **48**


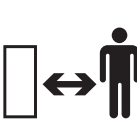
- Points ..... 48
- Procedure ..... 48

**Haul** ..... **49**

- Inspect Trailer ..... 49
- Load ..... 50
- Tie Down ..... 51
- Unload ..... 52


**Retrieve** ..... **52**

# Lift

		<p><b>⚠ WARNING</b> Lifted load. Crushing weight can cause death or serious injury. Stay away from lifted load and its range of movement.</p>
<p><b>To help avoid injury:</b> Only lift unit without attachment installed.</p>		

## Points


Lifting points are identified by lifting decals. Lifting at other points is unsafe and can damage machinery.

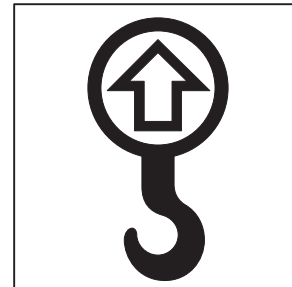

ic1319a.eps


## Procedure

Use equipment capable of supporting the machine's size and weight to lift as shown. See "SK600" on page 78 or measure and weigh equipment before lifting.

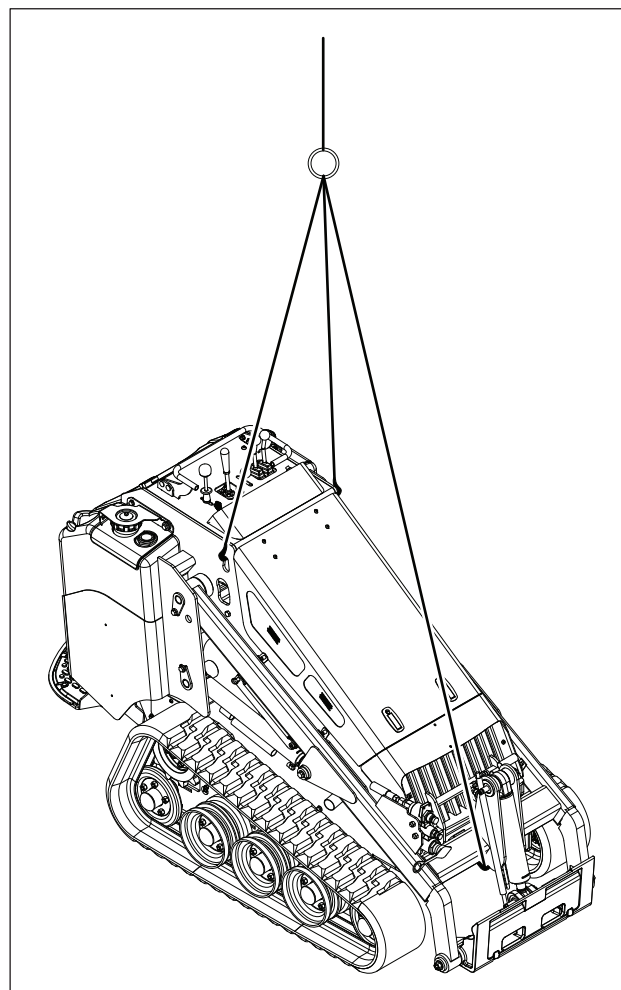

t35om022w.eps

## Haul

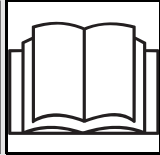

**⚠ WARNING**

Misuse of machine can cause death or serious injury. Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.


**To help avoid injury:**

- Read trailer operator's manual before loading or transporting machine.
- Ensure tow vehicle has proper tow capacity rating.
- Attach trailer to vehicle before loading or unloading.
- Load and unload trailer on level ground.
- To help prevent trailer sway, load trailer so that 10-15 percent of total vehicle weight (equipment plus trailer) is on tongue.
- If loading onto tilt-bed trailer, be prepared for trailer to tilt.

## Inspect Trailer

- Check hitch for wear and cracks.
- Check battery for 12V charge.
- Inspect lights for cleanliness and correct operation.
- Inspect reflectors and replace if needed.
- Check tire pressure.
- Check lug nut torque.
- Ensure trailer brakes are adjusted to come on with tow vehicle brakes.
- Check trailer bed for cracks.

## Load

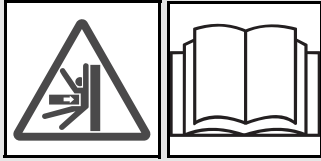

**⚠ WARNING** Horizontal movement. Crushing can cause death or serious injury. Read and understand operator's manual and all safety instructions before use.


**To help avoid injury:** Start and operate only from platform.

1. Start engine.
2. Release parking brake.
3. Set to low throttle.
4. Raise attachment clear of trailer, but keep it low.
5. Move machine to rear of trailer and align with ramps.
6. Drive forward slowly to move machine onto trailer until tiedown position is reached.
7. Lower attachment to trailer bed.
8. Set parking brake.
9. Ensure all controls are in neutral position.
10. Shut off machine.
11. Tie down machine.

## **Tie Down**

### **Points**


Tiedown points are identified by tiedown decals. Securing to truck or trailer at other points is unsafe and can damage machinery.

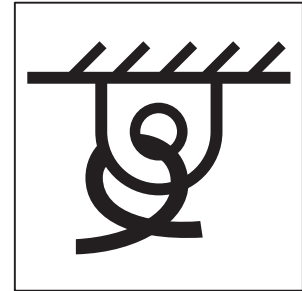

ic1320a.eps


### **Procedure**

Loop tiedowns around machine tie down points (shown). Ensure tiedowns are tight before transporting.

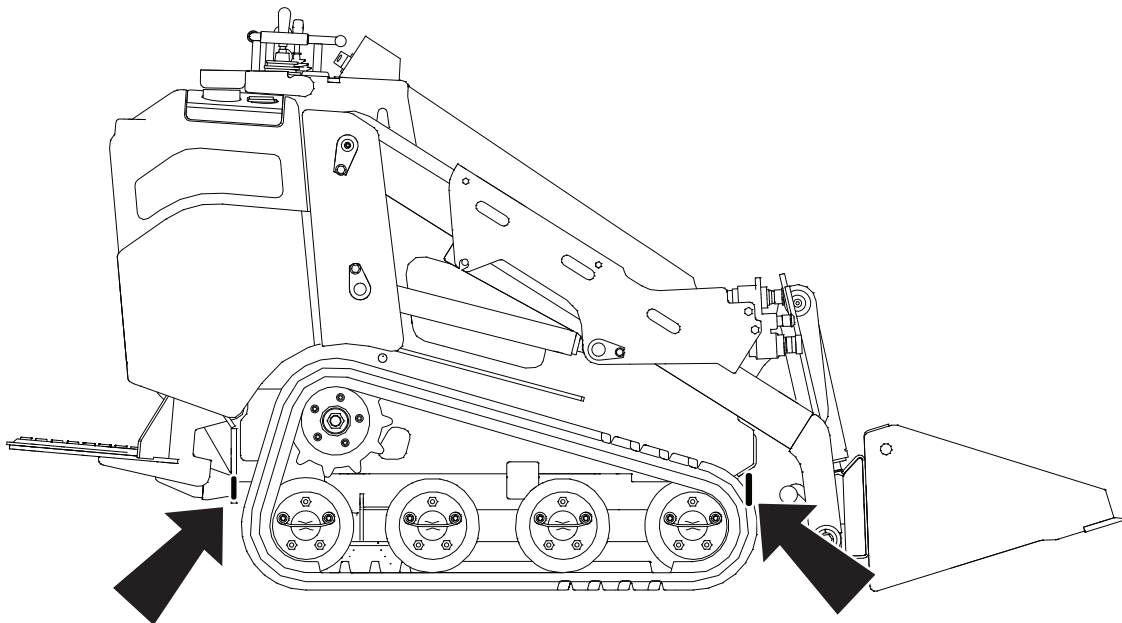

t51om019w.eps

## Unload

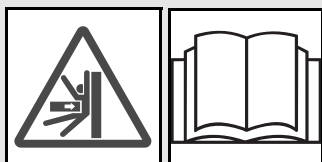

**⚠ WARNING** Horizontal movement. Crushing can cause death or serious injury. Read and understand operator's manual and all safety instructions before use.

**To help avoid injury:** Start and operate only from platform.


1. Prepare trailer and ramps for unloading.
2. Remove tiedowns.
3. Start engine.
4. Release parking brake.
5. Raise attachment clear of trailer, but keep it low.
6. Adjust to low throttle and slowly back machine down trailer or ramps.

## Retrieve

Under normal conditions, machine should not be towed. If machine becomes disabled and retrieval is necessary:


- Tow for no more than 100' (30m) at less than 1mph (1.6km/h).
- Use towing chains appropriately rated for maximum towing force.
- Use no more than 1300lb (5800N) of towing force.
- Remember that steering will be difficult.

1. Set parking brake (shown).
2. Block tracks to prevent machine from rolling.

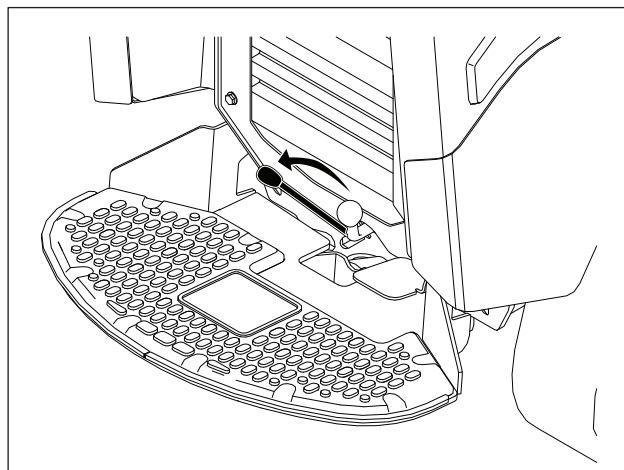


t51om022w.eps

3. Attach chain to tow points shown facing towing vehicle. (Operator station not shown.)

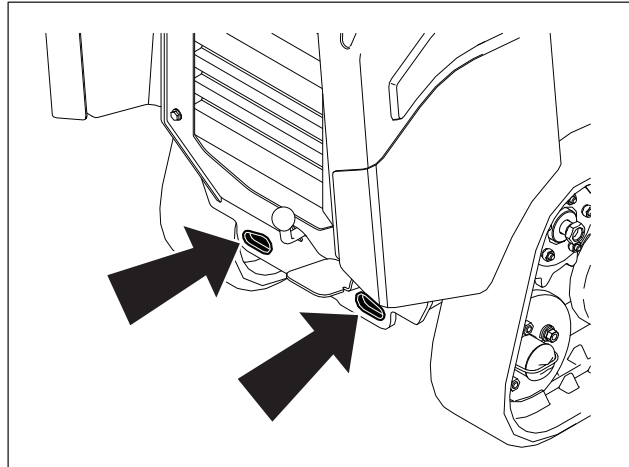

t51om021w.eps

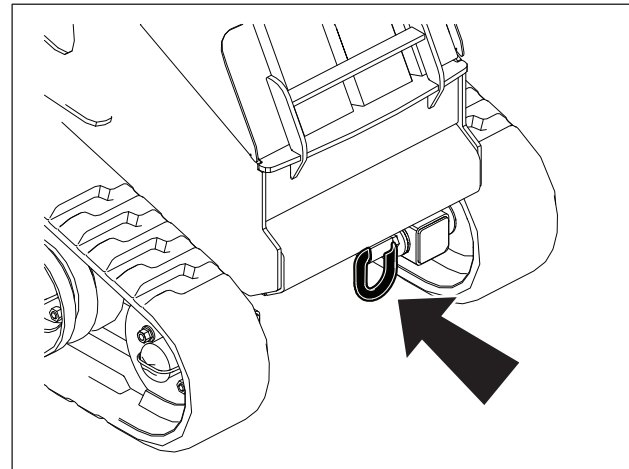


t51om020w.eps

4. Activate tow valves on both front and rear pumps by turning levers into position as shown.

**NOTICE:** When tow valves are open, only parking brake is functional.

5. Remove blocks.
6. Release parking brake.
7. After towing, turn tow valves back into operating position.

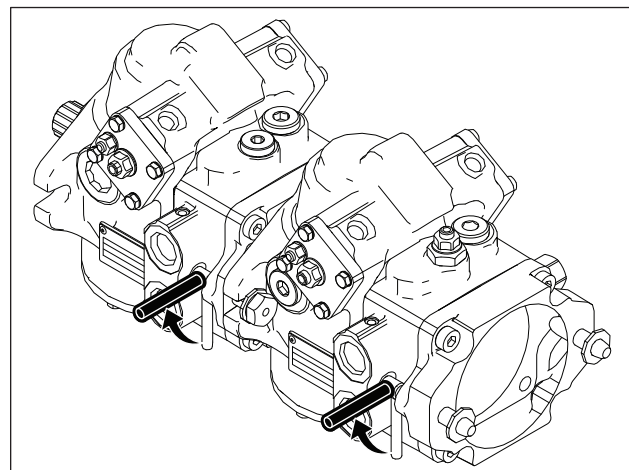

t51om032w.eps



---

# Complete the Job

## Chapter Contents



For additional precautions, see "Safety Awareness" and "Prepare" chapters.

**Rinse Equipment . . . . . 56**

**Disconnect Attachment . . . . . 56**

**Stow Tools . . . . . 56**

## **Rinse Equipment**

**NOTICE:**

- Do not spray water onto operator's console or electrical center in engine compartment. Water can damage electrical components. Wipe down instead.
- Ensure all mud and debris is rinsed from tracks before parking unit overnight.

1. Spray water onto equipment to remove dirt and mud.
2. Remove mud from track sprockets.
3. Wash undercarriage. Pay special attention to brake pin area.

## **Disconnect Attachment**

1. Lower attachment to the ground.
2. Shut off machine.
3. Disengage lock pins by lifting handles upward.
4. Cycle attachment drive control and disconnect hydraulic hoses, if needed.
5. Start engine.
6. Tilt mount plate forward and back machine away from attachment.

## **Stow Tools**

Ensure all tools and accessories are loaded and properly secured on trailer.

---

# Service

## Chapter Contents

 For additional precautions, see "Safety Awareness" and "Prepare" chapters.

- Service Precautions . . . . . 58**
  - Welding Precaution . . . . . 59
  - Washing Precaution . . . . . 59
  - Working under Raised Lift Arms . . . . . 59
  
- Recommended Lubricants . . . . . 60**
  - Engine Oil Temperature Chart . . . . . 61
  - Approved Coolant . . . . . 61
  - Approved Fuel . . . . . 62
  
- Service Interval Chart . . . . . 63**
  
- Procedures . . . . . 64**

## Service Precautions



**⚠ WARNING** Misuse of machine can cause death or serious injury. Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.

### To help avoid injury:

- Unless otherwise instructed, all service should be performed with the engine off and cool.
- Lower unsecured, raised components before servicing equipment.
- Unless otherwise instructed, all service should be performed with machine parked on level surface.
- Refer to US Occupational Safety and Health Administration (OSHA) guidelines for appropriate lockout-tagout procedures.



**⚠ WARNING** Jobsite hazards. Exposure can cause death or serious injury. Use correct equipment and work methods. Use and maintain appropriate safety equipment.

### To help avoid injury:

- Wear personal protective equipment including hard hat, safety eye wear, foot protection, hearing protection, and gloves (except when near rotating equipment).
- Remove jewelry.
- Wear close-fitting, high visibility clothing.
- Have other personal protective equipment, such as insulated boots and gloves, breathing protection, and face shield, etc. available for use depending on jobsite hazards or requirements.

## Welding Precaution

**NOTICE:** Welding can damage electronics.

- Welding currents can damage electronic components. Always disconnect the ECU ground connection from the frame, harness connections to the ECU, and other electronic components prior to welding on machine or attachments.
- Connect welder ground close to welding point and make sure no electronic components are in the ground path.
- Disconnect battery at battery disconnect switch before welding to prevent damage to battery.
- Never turn off battery disconnect switch with engine running, or alternator and other electronic equipment devices may be damaged.

## Washing Precaution


**NOTICE:** Water can damage electronics. When cleaning equipment, do not spray electrical components with water.

## Working under Raised Lift Arms







**⚠ WARNING** Raised component. Crushing can cause death or serious injury. Stay away or secure raised component with locking device. Use correct equipment and procedures.

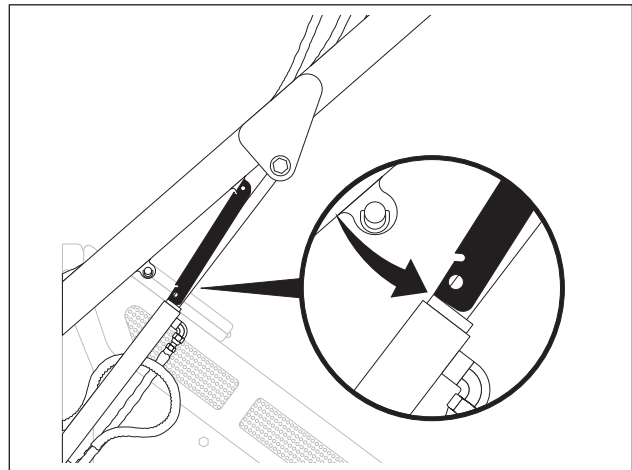Pin safety supports as shown when working under raised lift arms.



t35om037w.eps


## Recommended Lubricants

Item	Description
 DEAC	Diesel engine antifreeze/coolant, low silicate, fully-formulated meeting ASTM D6210.  See "Approved Coolant" on page 61.
 DEO	<b>HRC:</b> Diesel engine oil meeting or exceeding API CH-4 (CH-4, CI-4, CJ-4) or ACEA E7 (E6, E7 OR E9). See "Engine Oil Temperature Chart" on page 61.  API American Petroleum Institute, ACEA European Automobile Manufacturer's Association  <b>LRC:</b> Diesel engine oil compatible with the sulfur content of the fuel used. <ul style="list-style-type: none"> <li>• If the fuel sulfur content exceeds 500ppm (500mg/kg), the oil's base number (TBN) should exceed 10.</li> <li>• If the fuel sulfur content exceeds 5000ppm (5000mg/kg), reduce change interval to every 50 hours.</li> <li>• See viscosity chart.</li> </ul>
 MPG	Multipurpose grease, polyurea based NLGI GC-LB Grade 1.5 or lithium based NLGI GC-LB Grade 2
 THF	Tractor hydraulic fluid, Phillips 66® PowerTran Fluid, Mobilfluid® 423, Chevron® Tractor Hydraulic Fluid, Texaco® TDH Oil, or equivalent

Proper lubrication and maintenance protects Ditch Witch® equipment from damage and failure. Service intervals listed are for minimum requirements. In extreme conditions, service machine more frequently. Use only genuine Ditch Witch parts, filters, approved lubricants, TJC, and approved coolants to maintain warranty. Fill to capacities listed in "SK600" on page 78.

For more information on engine lubrication and maintenance, see your engine manual.

## Engine Oil Temperature Chart

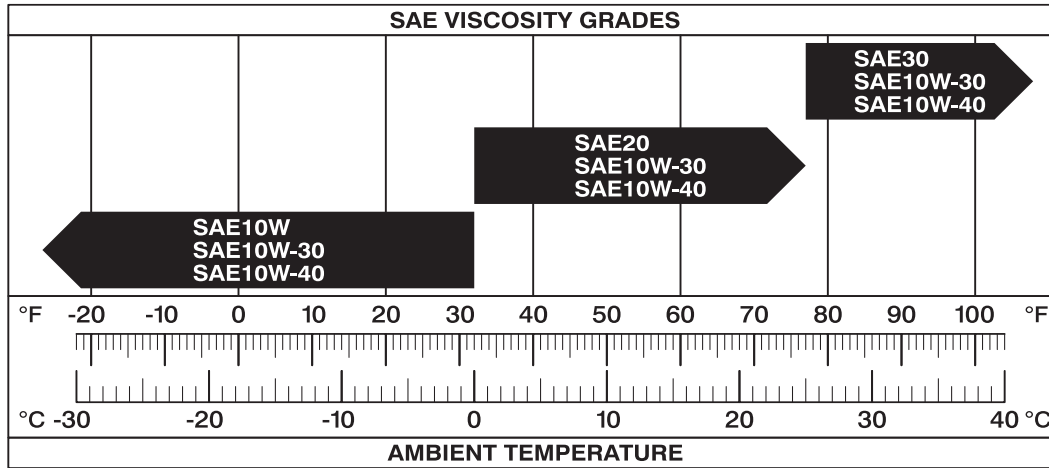

t18om049a.eps

Temperature range anticipated before next oil change

## Approved Coolant


**NOTICE:**

- Use only pre-diluted coolant or concentrated coolant mixed with distilled water. Do not use tap water.
- Using water or high-silicate automotive-type coolant will lead to engine damage or premature engine failure.
- Mixing heavy-duty diesel engine coolant and automotive-type coolants will lead to coolant breakdown and engine damage.

This machine was filled with Fleetguard® ES Compleat™ coolant (blue in color) before shipment from factory. This coolant is available, pre-diluted, from your Ditch Witch® dealer as part number 255-1055. Add or replace with heavy-duty diesel engine coolant meeting ASTM D6210.

## Approved Fuel

### HRC (Highly Regulated Countries)

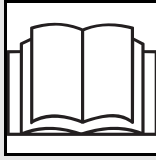**⚠ WARNING**

Ultra Low Sulfur Diesel (ULSD) poses a greater static ignition hazard than earlier diesel formulations with higher sulfur content. Avoid death or serious injury from fire or explosion; consult with your fuel or fuel system supplier to ensure the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

This engine is designed to run on diesel fuel. Use only high quality fuel meeting ASTM D975 No. 2D, EN590, or equivalent. At temperatures below 32°F (0°C) winter fuel blends are acceptable. See the engine manual for more information.

**NOTICE:** Use only Ultra Low Sulfur Diesel (less than 15ppm sulfur content in the US and Canada or 10mg/kg in EU and Japan) in this unit. Operating with higher sulfur content will damage the engine and aftertreatment device.

Biodiesel blends up to 5% (B5) are approved for use in this unit. The fuel must meet the specifications for diesel fuel shown above. In certain markets, higher blends may be used if certain steps are taken. Extra attention is needed when using biodiesel, especially when operating in cold weather or storing fuel. Contact your Ditch Witch® dealer or the engine manufacturer for more information.

### LRC (Less Regulated Countries)







This engine is designed to run on diesel fuel. Use only high quality fuel meeting ASTM D975 No. 2D, EN590, or equivalent. At temperatures below 32°F (0°C) winter fuel blends are acceptable. See the engine manual for more information.

**NOTICE:** Worldwide, fuel sulfur regulations vary widely. Fuel used should always comply with local regulations. Prior to shipping, LRC units were filled with CJ-4 DEO. If using fuel with sulfur content above 15ppm (15mg/kg), change oil initially at 250 hours.

Biodiesel blends up to 5% (B5) are approved for use in this unit. The fuel must meet the specifications for diesel fuel shown above. In certain markets, higher blends may be used if certain steps are taken. Extra attention is needed when using biodiesel, especially when operating in cold weather or storing fuel. Contact your Ditch Witch® dealer or the engine manufacturer for more information.

# Service Interval Chart

**IMPORTANT:** Chart indicates first instance of repeated service procedures. See detailed information below.

 Adjust, service, or test	 Change, initial	 Lube, initial
 Check	 Change	 Lube

Service	Startup	10 Hours	50 Hours	100 Hours	300 Hours	400 Hours	600 Hours	900 Hours	1200 Hours	As Needed
Battery		▲								▽
Belt, fan				▲			□			
Brake	▲	▲								
Coolant	▲	▲							□	
Dust ejector valve	▲	▲								
Engine compartment		▲								
Filter, air	▲	▲								■
Filter, engine oil (see Oil, engine)										
Filter, fuel						■				
Filter, hydraulic fluid			□		■					
Fluid, hydraulic	▲	▲					■			
Fuel hose			▲							
Fuse box	▲									
Hydraulic hoses	▲	▲								
Idler roller bearings					▲					▽
Intake air line					▲					
Lug nuts		▲	▲		▲					

Service	Startup	10 Hours	50 Hours	100 Hours	300 Hours	400 Hours	600 Hours	900 Hours	1200 Hours	As Needed
Oil, engine	▲	▲	□	■						
Radiator/Hydraulic fluid cooler			▲							▽
Track	▲	▲								▽

## Procedures

### Battery




**CAUTION**

Explosive hydrogen gas. Fire or explosion can cause death or serious injury. Keep heat flames, sparks, and other sources of ignition away.

**To help avoid injury:**

- Use a single 12V maximum source for charging. Never connect to rapid chargers or dual batteries.
- Never lean over battery when making connections.
- Never allow vehicles to touch when charging.
- Never short-circuit battery terminals for any reason or strike battery posts or cable terminals.
- Refer to Safety Data Sheet (SDS) for additional information regarding battery.

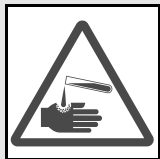

**CAUTION**

Corrosive fluid. Contact can cause death or serious injury. Avoid contact. Wear appropriate gloves. See Safety Data Sheet (SDS) for more information.

**To help avoid injury:**

- Never attempt to charge a battery that is leaking, bulging, heavily corroded, frozen, or otherwise damaged.
- Refer to Safety Data Sheet (SDS) for additional information regarding battery.


**NOTICE:**

- Electronic components can be easily damaged by electrical surges. Jump starting can damage electronics and electrical systems, and is not recommended. Try to charge the battery instead. Use quality large diameter jumper cables capable of carrying high currents (400 amps or more). Low quality cables may not allow enough current flow to charge a dead/discharged battery.
- Read all steps thoroughly and review illustration before performing procedure.

Check battery every 10 hours. Charge as needed.

**Check**

1. Turn battery disconnect switch, if equipped, off.
2. Ensure that no ignition sources are near battery.
3. Loosen and remove battery cable clamps carefully, negative (-) cable first.
4. Clean cable clamps and terminals to remove dull glaze.
5. Check for signs of internal corrosion in cables.
6. Connect battery cable clamps, positive (+) cable first.
7. Tighten any loose connections.
8. Ensure that battery tiedowns are secure.
9. Turn battery disconnect, if equipped, on.

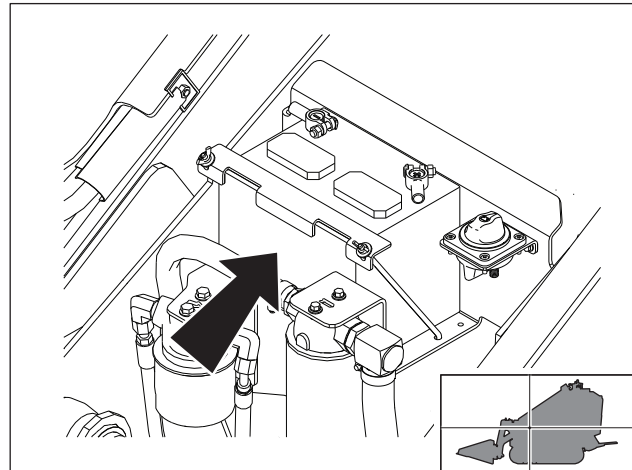


t51om030w.eps

**Charge**

1. Park service vehicle close to disabled equipment but do not allow vehicles to touch.
2. Engage parking brake in both vehicles.
3. Turn ignition switch off in both vehicles and turn off all electrical loads.
4. Disconnect machine controller, if equipped.
5. Inspect battery in disabled machine (B) for signs of cracking, bulging, leaking, or other damage.
6. Connect red positive (+) jumper cable clamp to positive (+) post of battery (2) in disabled machine.

**IMPORTANT:** Some equipment may have a positive jumper cable terminal (1) located externally. If so equipped, connect red positive (+) jumper cable clamp to terminal.

7. Connect the other red positive (+) jumper cable clamp to positive (+) post of battery in service vehicle (A).
8. Connect black negative (-) cable clamp to negative (-) post of battery in service vehicle.
9. Connect the other black negative (-) cable clamp to engine or frame ground on disabled machine, at least 12" (305 mm) from failed battery, as shown.
10. Operate service vehicle engine at 1500-2000 rpm for a few minutes to build an electrical charge in failed battery.
11. Stop engine in service vehicle.
12. Remove jumper cables from service vehicle, black negative (-) clamp first. Do not allow clamps to touch.
13. Remove black negative (-) cable clamp from disabled engine or frame ground.
14. Remove red positive (+) cable clamp from disabled machine.
15. Reconnect machine controller, if equipped.
16. Start disabled machine.

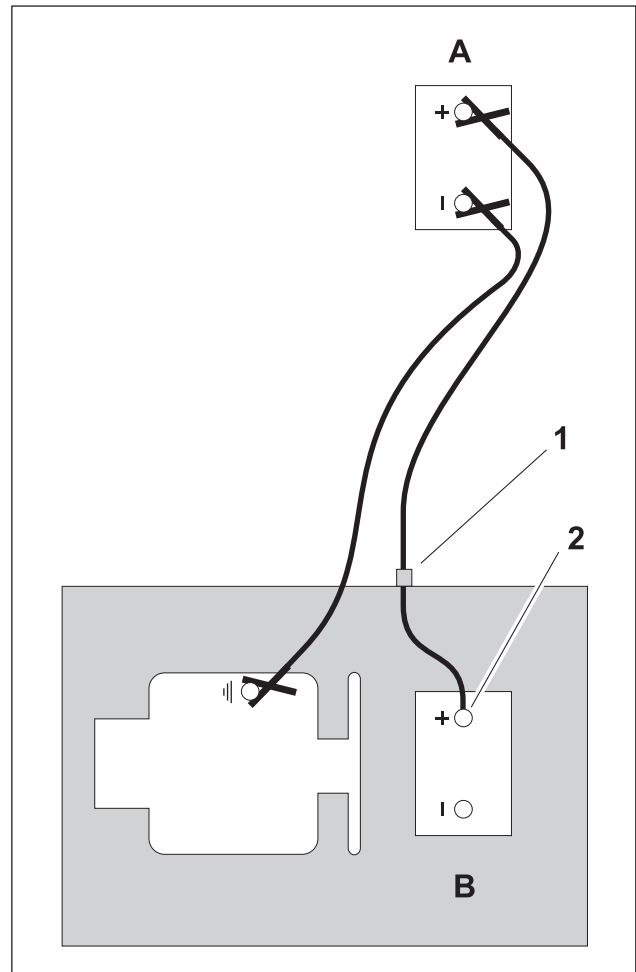

Battery\_Jumpstart\_B.eps

## **Belt, Fan**


Check every 100 hours. Change every 600 hours.

### **Check**

Check for excessive slack, damage or wear. Belt is properly tensioned when it moves about 1/4-3/8" (7-9mm) when pushed at the long span (shown).

### **Change**

1. Loosen two alternator bolts (1,2).
2. Replace belt.
3. Adjust position as needed.
4. Tighten bolts.
5. Check tension.

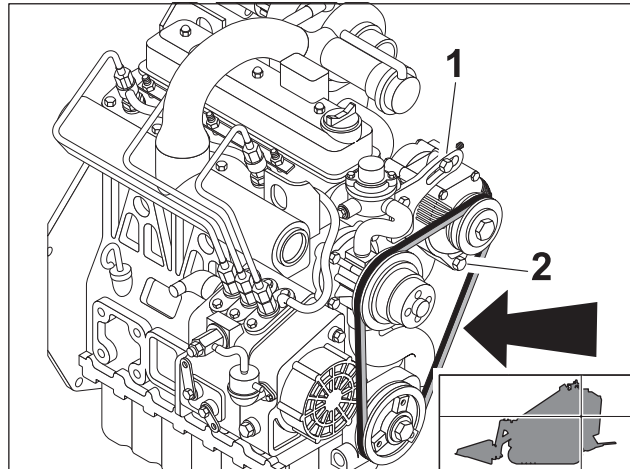


t51om033w.eps

## **Brake**

Check at startup and every 10 hours.

1. Ensure parking brake pin (shown) moves freely allowing brake to be set and released.
2. Clean mud and debris from area around pin.

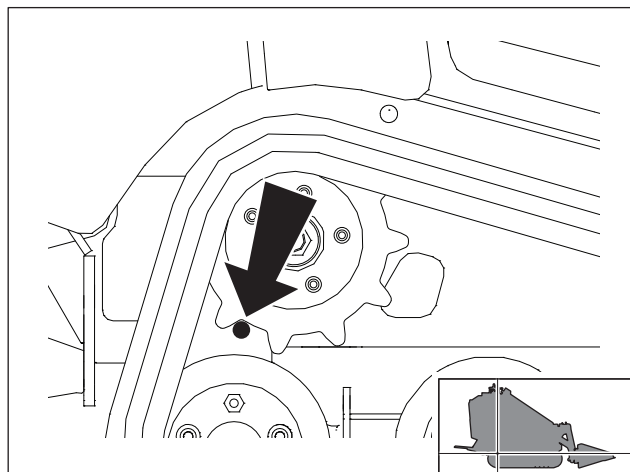

t51om023w.eps


## Coolant

**NOTICE:** See "Approved Coolant" on page 61.

Check before startup and every 10 hours. Change every 1200 hours.

### Check


1. Check level at overflow bottle (1).
2. Add DEAC at fill (2) as needed to keep level at halfway point on overflow bottle.

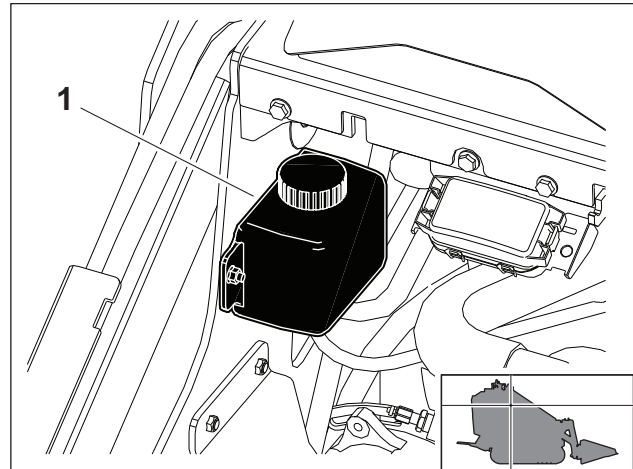

t51om006w.eps

### Change


1. Remove plug (3) to drain.
2. Install plug.
3. Add DEAC at fill to keep level at halfway point on overflow bottle.

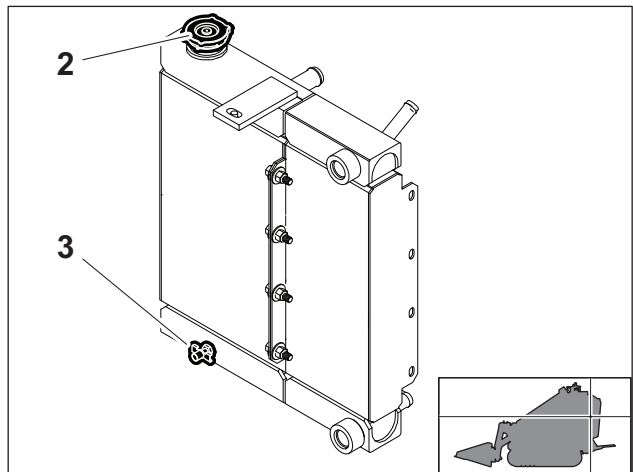

t51om028w.eps

## Dust Ejector Valve

Check valve (shown) before startup and every 10 hours. Ensure valve is not inverted, damaged, plugged, or cracked.

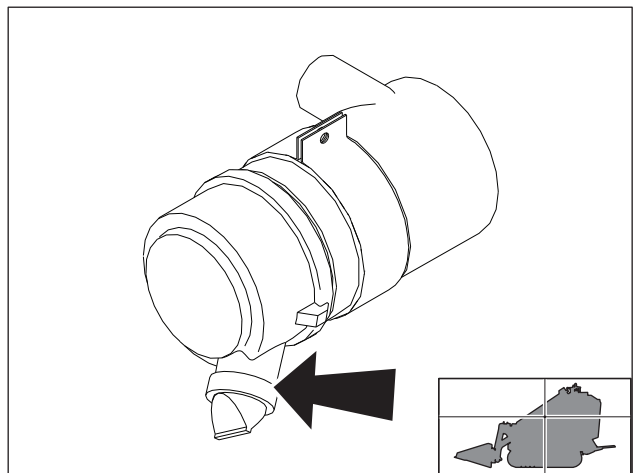


t51om026w.eps

## Engine Compartment

### NOTICE:

- Check more often is operating in large brush, grassy conditions, or if machine is being stored.
- Do not use water or compressed air to remove debris.

Check engine compartment (shown) for debris every 10 hours and after long-term storage. Manually clean out debris as needed.

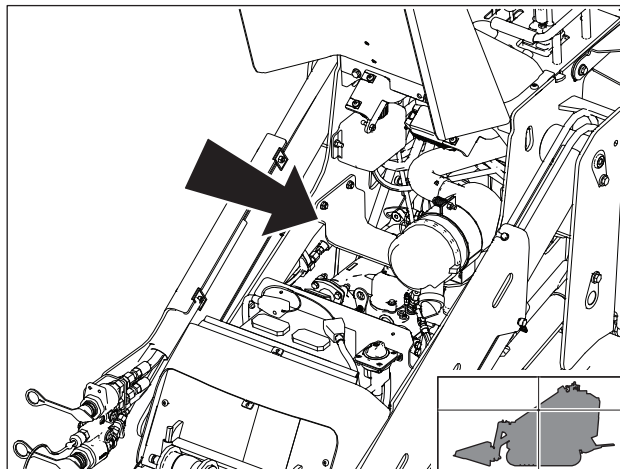

t51om041w.eps

## Filter, Air

### NOTICE:

- Only open air filter housing when air filter canister when air restriction is indicated.
- Change the elements. Do not attempt to clean them.
- Compressed air or water can damage filter elements.
- Tapping to loosen dirt can damage elements.


Check before startup and every 10 hours. Change as needed.

### Check

Check air filter service indicator (3). Change filter when red band on indicator is visible.

### Change

4. Remove cover (5).
5. Remove primary element (1) and secondary element (2).
6. Wipe inside of housing and wash cover.
7. Insert new secondary element and ensure it is seated correctly.
8. Insert new primary element.
9. Replace cover with dust ejector (4) facing down.
10. Reset air filter service indicator.

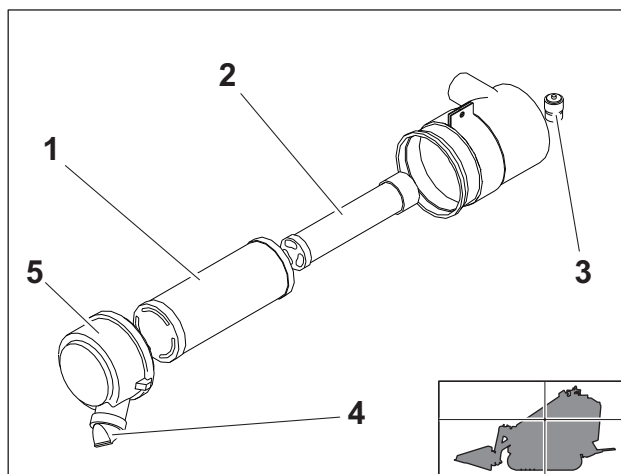


t51om010w.eps


## Filter, Fuel

**NOTICE:** If refueling from cans, replace filters more often.

Change filter (shown) every 400 hours.

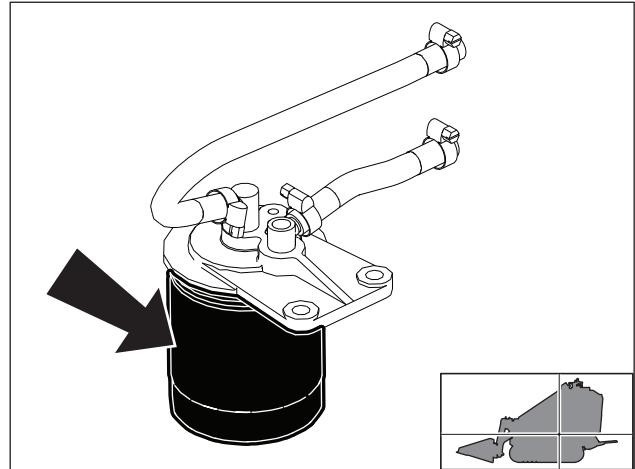


t51om035w.eps

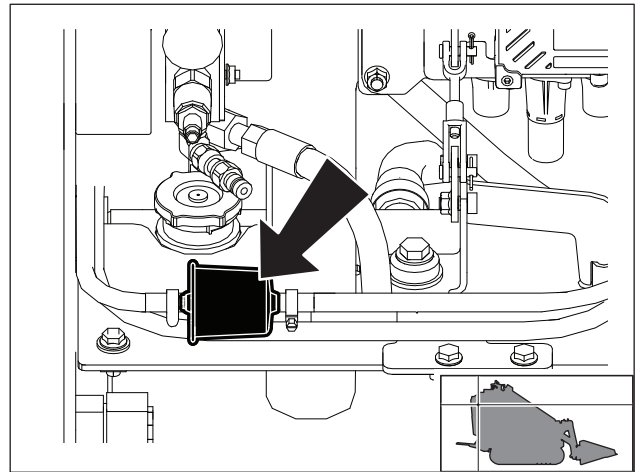

t51om005w.eps

## Filter, Hydraulic Fluid

Change filter (shown) at 50 hours and every 300 hours thereafter.

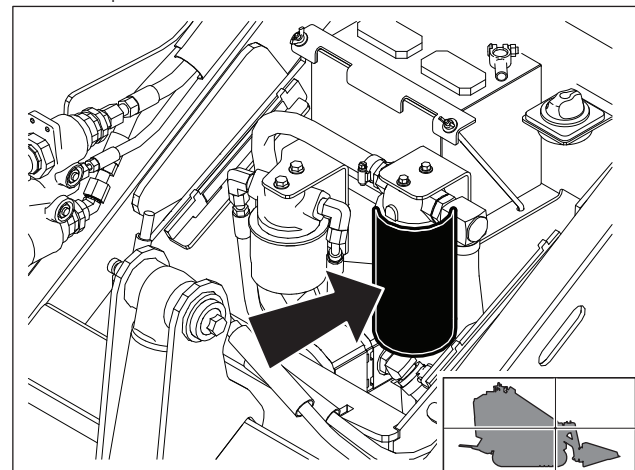

t51om004w.eps


## Fluid, Hydraulic

**NOTICE:** Change every 250 hours if jobsite temperature exceeds 100°F (38°C) more than 50% of the time.

Check before startup and every 10 hours. Change every 600 hours.

### Check

1. Check level at sight glass (2).
2. Add THF at fill (1) as needed to keep level at halfway point on sight glass.

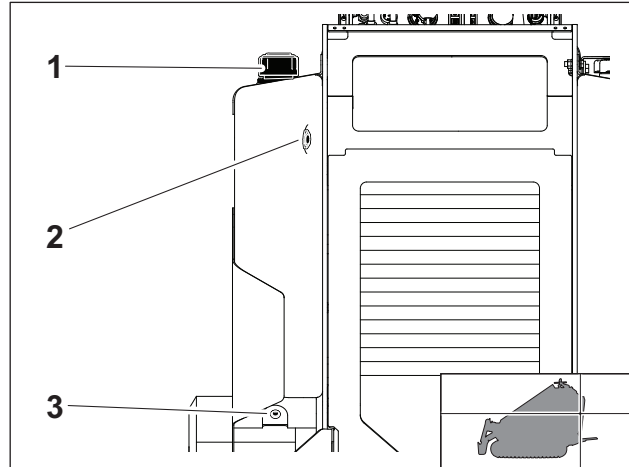

t35om029w.eps

### Change


1. Remove plug (3) to drain.
2. Install plug.
3. Add THF at fill to keep level at halfway point on sight glass.

## Fuel Hose

Check fuel hose (shown) and clamp bands every 50 hours.

If clamp is loose, apply oil to the threads and retighten. If hose is worn, replace.

Bleed fuel system if hose and/or clamp is changed.

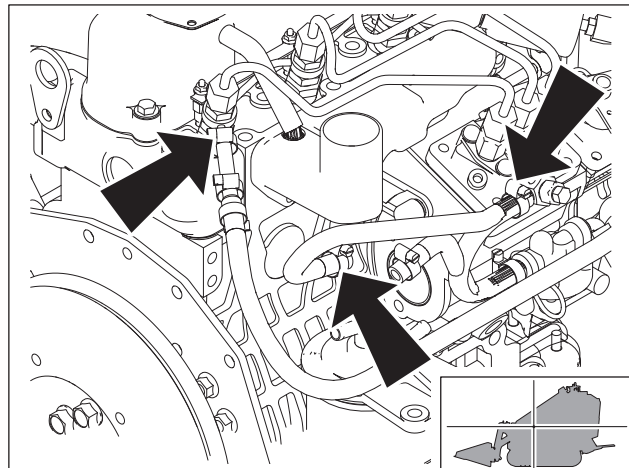


t51om003h.eps

## Fuse Box

**IMPORTANT:** Leave cover in place unless fuses are being checked or replaced.

Check fuse box cover for damage before startup. If cover is missing or damaged, replace.

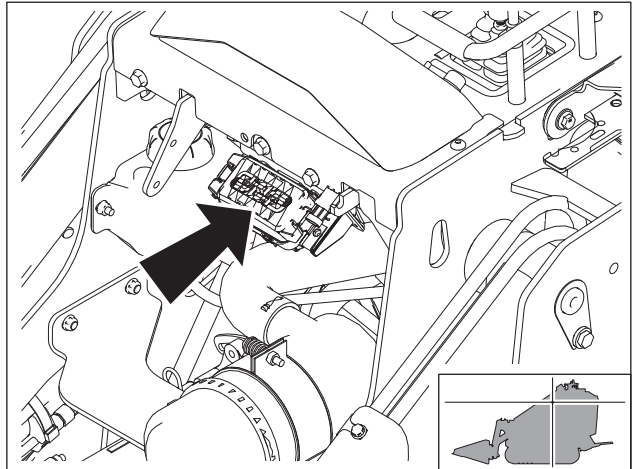

t51om004h.eps

## Hydraulic Hoses




**WARNING** Pressurized fluid or air. Injection can cause death or serious injury. Refer to operator's manual for correct use.

### To help avoid injury:

- Use a piece of cardboard or wood, rather than hands, to check for leaks.
- Before disconnecting a hydraulic line, turn engine off and operate all controls to relieve pressure.
- Lower, block, or support any raised component with a hoist.
- Cover connection with heavy cloth and loosen connector nut slightly to relieve residual pressure. Catch all fluid in a container.
- Before using system, check that all connections are tight and all lines are undamaged.
- If you are injured, seek immediate medical attention from a doctor familiar with this type of injury.

Check for leaks where shown before startup and every 10 hours of operation.

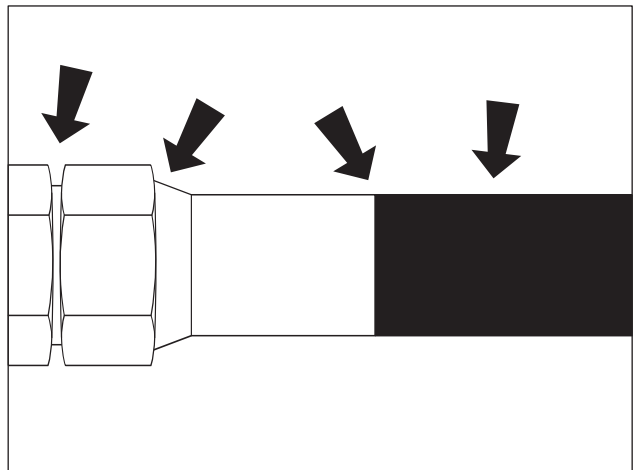


CheckHoses.eps

## Idler Roller Bearings

Check every 300 hours. Adjust as needed.

### Check

1. Lift machine off ground.
2. Release track tension. See "Track Tension" on page 76.
3. Check for movement of each hub (shown) when rocked back and forth. If hub has noticeable movement, adjust idler roller bearing.
4. Tension track.

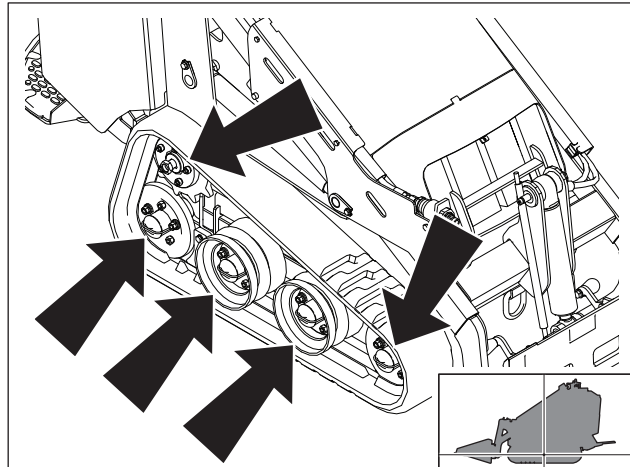


t510m027w.eps

### Adjust

1. Release track tension. See "Track Tension" on page 76.
2. Remove bolts (1, drive roller) or flange lock nuts (8, idler roller) and lug nuts (3) to remove dust cap retainer (2).
3. Remove dust cap (4).
4. Remove cotter pin (6).
5. Ensure bearings are properly seated by tightening castle nut (5) to 30-40ft•lb (40.7-54.2N•m) while turning the hub (7).

**NOTICE:** Do not move hub after this step is completed.

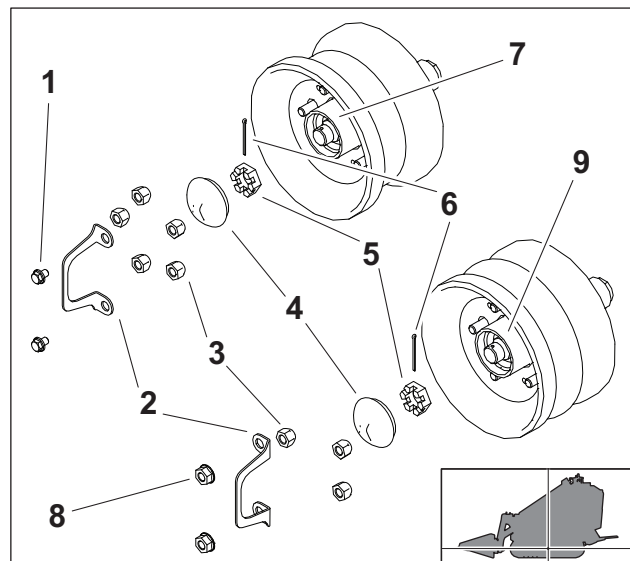

t510m029w.eps

6. Loosen castle nut.
7. Hand-tighten castle nut.
8. Insert cotter pin into wheel spindle (9).

**NOTICE:** If hole is visible in slot but cotter pin cannot be inserted, slightly loosen or tighten castle nut to align slot with hole and insert cotter pin. If hole is not visible in slot, loosen to next available slot and install cotter pin.

9. Bend legs of cotter pin over the top of the spindle.


**IMPORTANT:** Hub should not have noticeable movement when rocked back and forth.

10. Reassemble.
11. Tighten lug nuts to 80ft•lb (108N•m).
12. Adjust track tension.

## Intake Air Line

**NOTICE:** Keep dust out of the intake air line to prevent damage to the engine.


Check intake air line (shown) for dirt and debris every 300 hours. If clamp is loose, apply oil to threads and tighten. If hose is cracked or worn, replace.

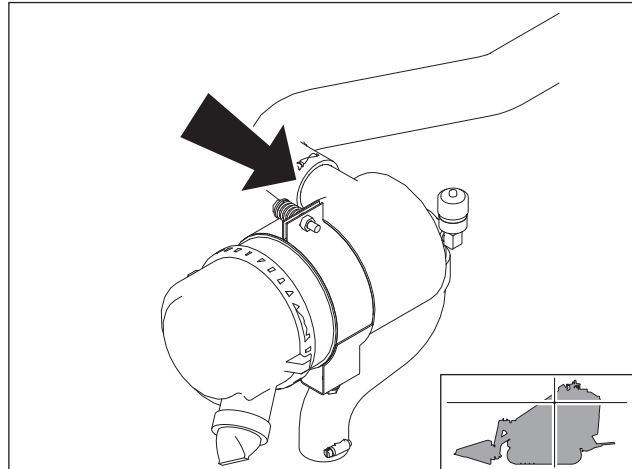

t51om005h.eps

## Lug Nuts

Check lug nut (shown) torque at 10 hours, 50 hours, and every 300 hours thereafter. Tighten to 80ft•lb (108N•m) as needed.

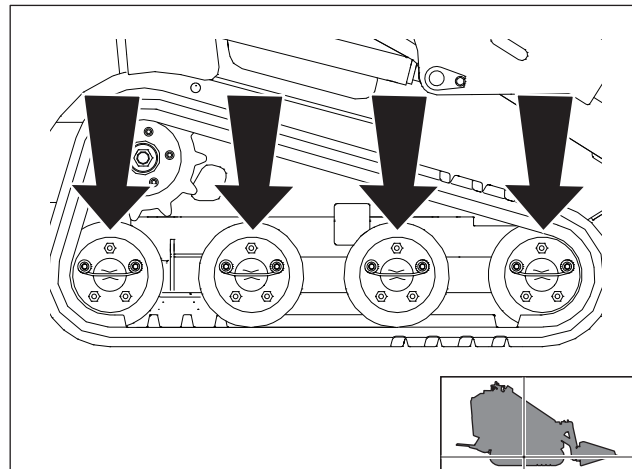

t51om024w.eps

## Oil, Engine


Check before startup and every 10 hours. Change at 50 hours and every 100 hours thereafter.

### Check

1. Check level at dipstick (2).
2. Add DEO at fill (2) as needed to keep level at highest line on dipstick.

### Change

1. While oil is warm, remove plug (3) to drain.
2. Install plug.
3. Remove filter (4) and replace with new filter.
4. Add DEO at fill to keep level at highest line on dipstick.

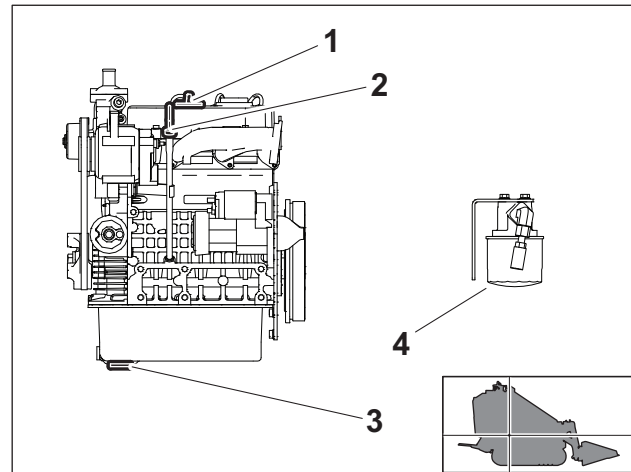

t510m007w.eps


## Radiator/Hydraulic Fluid Cooler

**NOTICE:** Radiator may need to be cleaned more frequently in dusty or grassy conditions.

Check radiator every 50 hours. Clean as needed.

### Check

Check radiator (shown) for dirt, grass, and other debris. Check radiator hoses for wear. Check hose clamps for proper tightness.

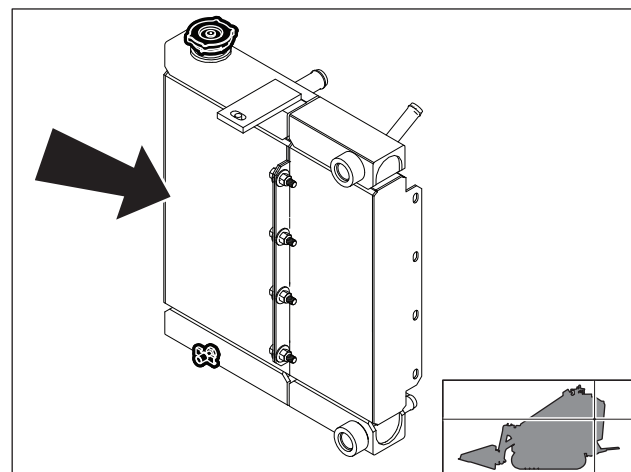

t510m040w.eps

### Clean

1. Clean fins with compressed air or spray wash.

**NOTICE:** Do not damage fins with high pressure air or water.

2. Open rear hood and spray through radiator toward engine.
3. If grease and oil are present on radiator, spray with solvent and allow to soak overnight.

## Track Tension

Check before startup and every 10 hours. Adjust as needed.

### Check

1. Remove cover.
2. With tube and tab (top): Measure distance (A) from end of viewing window to front end of spring guide. Tension is correct when measurement is 5/8-3/4" (16-19mm).

With mark on tube (bottom): Ensure mark on tube (2) is aligned with cutout (1) in plate.


3. Install cover.

### Adjust


1. Remove cover.
2. With tube and tab (top): Measure distance (A) from end of viewing window to front end of spring guide (orange tab). Tension is correct when measurement is 5/8-3/4" (16-19mm).

With mark on tube (bottom): Ensure mark on tube (2) is aligned with cutout (1) in plate.

3. Turn bolt (shown) clockwise to tighten and counterclockwise to loosen as needed.
4. Install cover.

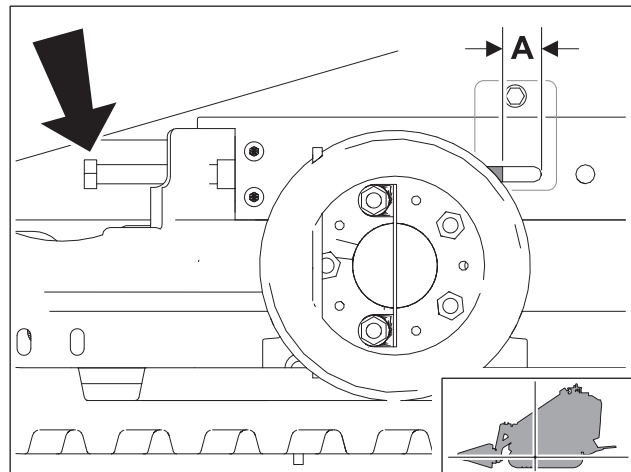

t51om001h.eps

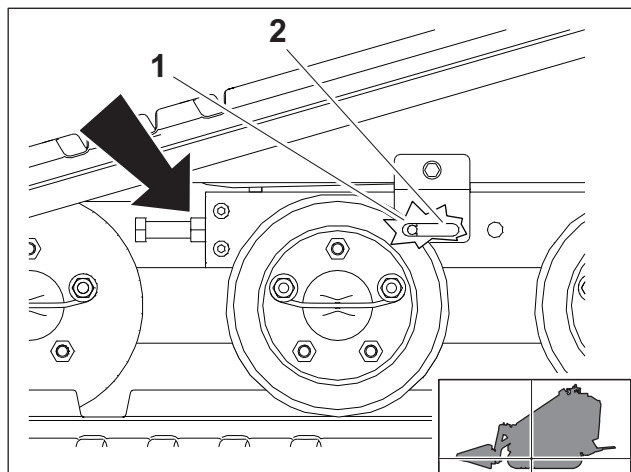

t51om025w.eps


---

# Specifications

## Chapter Contents

SK600 .....	78
Declaration of Conformity .....	81

# SK600

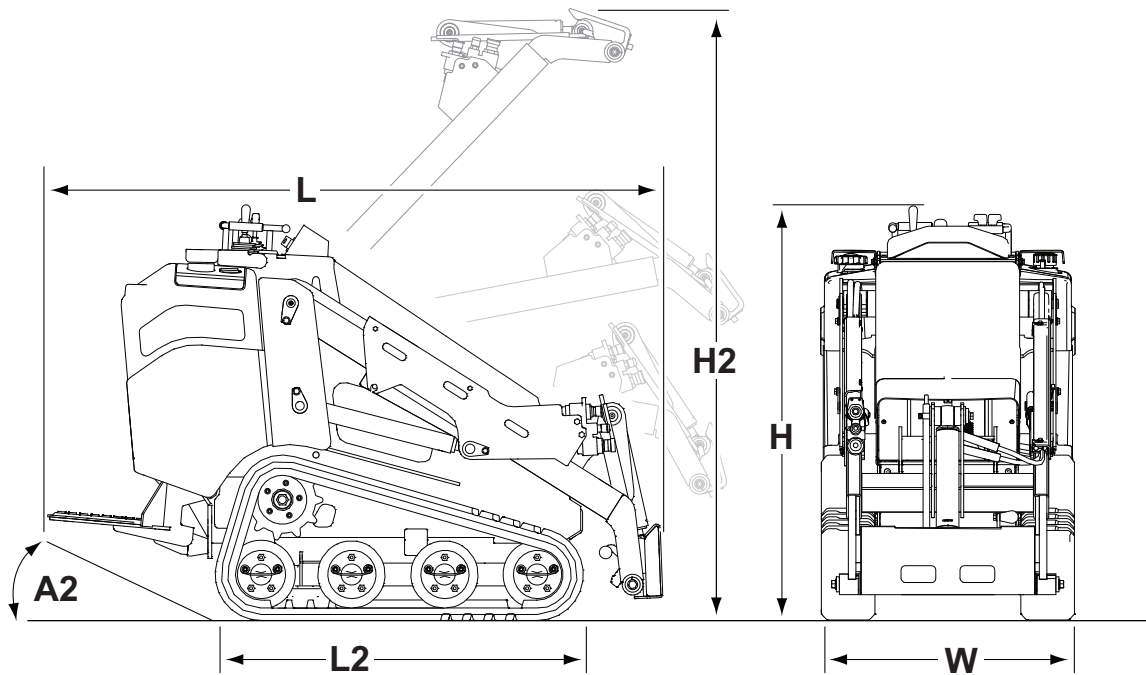

t51om036w.eps

Dimensions		US	Metric
A2	Angle of departure	27°	27°
H	Overall height of machine	54"	1390mm
H2	Hinge pin height, max	76"	1930mm
	Operating height, max, standard bucket	103"	2630mm
L	Overall length of loader, no attachment	80"	2040mm
	Overall length of machine, standard bucket	105"	2680mm
L2	Wheelbase/track length	36"	914mm
	Ground clearance, min (center/side)	8.2"/3.8"	207mm/96mm
W	Track width	33.5"	850mm
	Unit width, excluding tracks	33"	838mm
	Bucket rollback angle, full height	103°	103°
	Bucket rollback angle, ground level	30°	30°
	Bucket width, max	44"	1120mm

<b>Dimensions</b>		<b>US</b>	<b>Metric</b>
	Bucket width, min	34"	863mm
	Dump angle, standard bucket at max dump height	40°	40°
	Dump height, max, with standard bucket	53"	1355mm
	Reach, standard bucket at max dump height	25"	640mm
	Rear overhang, max	28"	711mm
	Swing radius, max, standard bucket	61"	1550mm
	Swing radius, no attachment	45"	1160mm

<b>Operation</b>		<b>US</b>	<b>Metric</b>
	Ground drive speed, forward and reverse	4.1mph	6.6km/h
	Ground pressure, 7" (180mm) tracks *	4.8psi	0.33bar
	Machine weight (no attachment, fluids full)	2418lb	1096kg
	Operating capacity (35% of tipping capacity)	600lb	272kg
	Tipping capacity	1725lb	782kg
<p>The rated operating capacity for this machine was determined using a standard bucket in the drive position with center of gravity 7" (18cm) from the attachment plate. Depending on the attachment, the actual operating capacity of the attachment may vary.</p>			

\* Includes machine weight, 175-lb (80-kg) bucket, 165-lb (75-kg) operator

<b>Engine</b>		<b>US</b>	<b>Metric</b>
Engine: Kubota® D902-E4B, EPS Tier 4, EU Stage IIIa			
	Fuel	Diesel	
	Number of cylinders	3	
	Displacement	54.8in <sup>3</sup>	0.898L
	Bore	2.83"	72mm
	Stroke	2.9"	73.6mm
	Manufacturer's gross power rating (per SAE J1955)	24.8hp	18.5kW
	Estimated net power rating (per SAE 1348)	23.5hp	17.5kW
	Rated engine speed	3600rpm	3600rpm

<b>Hydraulic System</b>		<b>US</b>	<b>Metric</b>
Auxiliary: double gear pump			
	Flow rate (pump 1)	6.0gpm	22.7L/min
	Flow rate (pump 2)	6.0gpm	22.7L/min
	Pressure	3000psi	207bar

Ground drive: dual hydrostat

	Flow rate	12.5gpm	47.2L/min
	Pressure	3625psi	250bar

<b>Fluid Capacities</b>		<b>US</b>	<b>Metric</b>
Fuel tank		10.5gal	40L
Engine oil, with filter		3.9qt	3.7L
Hydraulic reservoir		9.2gal	35L

**Battery**

SAE reserve capacity 85min, SAE cold crank @ 0°F (-18°C) 525amp, 12V electrical system

**Vibration Levels**

Average vibration transmitted to the operator's hand during normal operation with a loader bucket is 6.5m/sec<sup>2</sup>. Average vibration transmitted to the whole body during normal operation with a loader bucket is 0.81m/sec<sup>2</sup>. Actual vibration will depend on the attachment being used.

**Noise Level**

This machine can generate sound levels exceeding 80dBA. Always wear appropriate hearing protection when operating machine. Find sound power and pressure information at [www.ditchwitch.com](http://www.ditchwitch.com), or contact [customersupport@ditchwitch.com](mailto:customersupport@ditchwitch.com).

Specifications are called out according to SAE recommended practices. Specifications are general and subject to change without notice. If exact measurements are required, equipment should be weighed and measured. Due to selected options, delivered equipment may not match that shown.

## **Declaration of Conformity**

Countries in the European Union should have received a Declaration of Conformity (DOC) with this machine similar to the example below.

The Charles Machine Works, Inc.  
PO Box 661959 West Fir Avenue  
Perry, Oklahoma, USA 73077-0066  
Phone: 580 572 3784  
FAX: 580 572 3525

*Declares that the product:*

<b>Model:</b>	<b>Ditch Witch® XXXX</b>
<b>Type:</b>	<b>(Machine Type)</b>
<b>Engine Power:</b>	<b>xxx kW</b>
<b>Serial Number:</b>	<b>CMWXXXXXXXXXXXXXXXX</b>

*Conforms to the requirements of:*

2006/42/EC Machinery Directive  
2004/108/EC Electromagnetic Compatibility Directive  
2000/14/EC Noise Emission Directive  
Measured sound power level (Annex V): **XXXdBA**  
Guaranteed sound power level (Annex V): **XXXdBA**

*The Technical Construction File is maintained at the manufacturer's location.*

*The manufacturer's European representative is:*

Ditch Witch Barcelona  
International Underground Systems, S.L.  
C/EL PLA, 130 \*Poligon Industrial El Pla  
08980 Sant Feliu De Llobregat \*Spain  
Phone: +34 93 632 7344  
FAX: +34 93 632 7343



# Support

## Registration

If your equipment was purchased through a Ditch Witch® dealer, it is already registered. If you purchased from any other source, please email [productsupportwarrantyadmin@ditchwitch.com](mailto:productsupportwarrantyadmin@ditchwitch.com) or fill out the registration card located in the back of the parts manual. Registration enables you to receive updates on this equipment as well as information on new products of interest.

## Procedure

Notify your dealer immediately of any malfunction or failure of Ditch Witch® equipment.

Always give model, serial number, and approximate date of your equipment purchase. This information should be recorded and placed on file by the owner at the time of purchase.

Return damaged parts to dealer for inspection and warranty consideration if in warranty time frame.

Order genuine Ditch Witch replacement or repair parts from your authorized Ditch Witch dealer. Use of another manufacturer's parts may void warranty consideration.

## Resources

### Publications

Contact your Ditch Witch dealer for publications and videos covering safety, operation, service, and repair of your equipment.

### Ditch Witch® Training

For information about on-site individualized training, contact your Ditch Witch dealer.

# Warranty

## **Ditch Witch® Equipment and Replacement Parts Limited Warranty Policy**

Subject to the limitation and exclusions herein, free replacement parts will be provided at any authorized Ditch Witch dealership for any Ditch Witch equipment or parts manufactured by the Ditch Witch factory that fail due to a defect in material or workmanship within one (1) year of first commercial use. Free labor will be provided at any authorized Ditch Witch dealership for installation of parts under this warranty during the first year following "initial commercial" use of the serial-numbered Ditch Witch equipment on which it is installed. The customer is responsible for transporting their equipment to an authorized Ditch Witch dealership for all warranty work.

### **Exclusions from Product Warranty**

- All incidental or consequential damages.
- All defects, damages, or injuries caused by misuse (including, but not limited to, rollover), abuse, improper installation, alteration, neglect, or uses other than those for which products were intended.
- All defects, damages, or injuries caused by improper training, operation, or servicing of products in a manner inconsistent with manufacturer's recommendations.
- All engines and engine accessories (these are covered by original manufacturer's warranty).
- Tires, belts, and other parts which may be subject to another manufacturer's warranty (such warranty will be available to purchaser).
- ALL IMPLIED WARRANTIES NOT EXPRESSLY STATED HEREIN, INCLUDING ANY WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY.

IF THE PRODUCTS ARE PURCHASED FOR COMMERCIAL PURPOSES, AS DEFINED BY THE UNIFORM COMMERCIAL CODE, THEN THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE FACE HEREOF AND THERE ARE NO IMPLIED WARRANTIES OF ANY KIND WHICH EXTEND TO A COMMERCIAL BUYER. ALL OTHER PROVISIONS OF THIS LIMITED WARRANTY APPLY INCLUDING THE DUTIES IMPOSED.

Ditch Witch products have been tested to deliver acceptable performance in most conditions. This does not imply they will deliver acceptable performance in all conditions. Therefore, to assure suitability, products should be operated under anticipated working conditions prior to purchase.

Defects will be determined by an inspection within thirty (30) days of the date of failure of the product or part by Ditch Witch Product Support (DWPS) or its authorized dealer. DWPS will provide the location of its inspection facilities or its nearest authorized dealer upon inquiry. DWPS reserves the right to supply remanufactured replacement parts under this warranty as it deems appropriate.

Extended warranties are available upon request from your local Ditch Witch dealer or the Ditch Witch factory.

Some states do not allow exclusion or limitation of incidental or consequential damages, so above limitation of exclusion may not apply. Further, some states do not allow exclusion of or limitation of how long an implied warranty lasts, so the above limitation may not apply. This limited warranty gives product owner specific legal rights and the product owner may also have other rights which vary from state to state.

For information regarding this limited warranty, contact the DWPS department, P.O. Box 66, Perry, OK 73077-0066, or contact your local dealer.